 
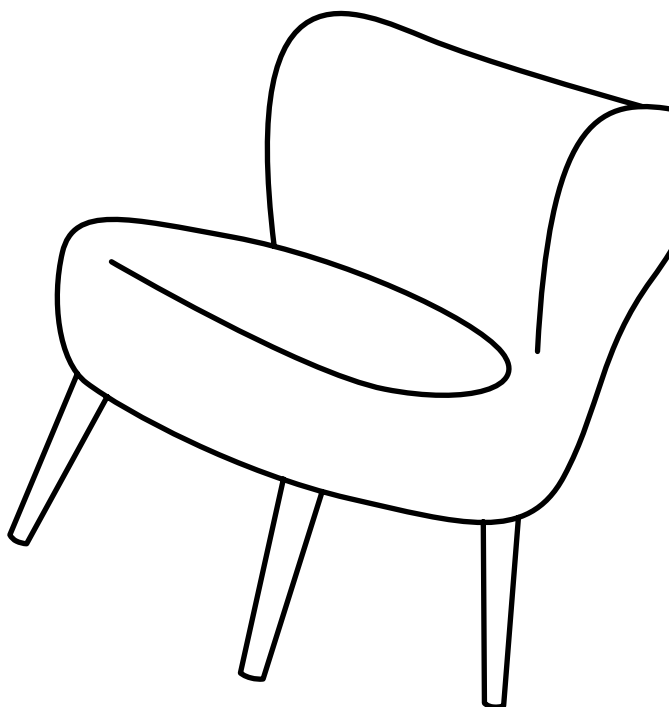 


Hello, I've arrived!

Now that I'm here you are only one
flat-pack away from transforming
your home.

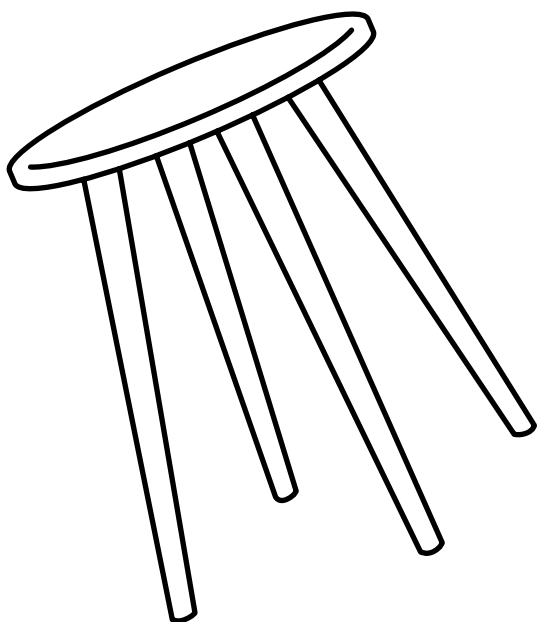

Mocka.

Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to safety testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create beautifully functional spaces to feel comfortably you.

Here are a few assembly tips before you get started:



Make Time

The first step to all seamless assembly is taking a moment to carefully read through the instructions—you are already on your way to creating a beautifully functional space!



Set The Mood

Put on your favourite playlist, order that pizza and pour yourself a drink to get in the mood!



Tool Check

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



Room Reveal

You did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging and share a pic of your room reveal—we love seeing how you transform your home! **Tag us @mockaaustralia/@mockaanz**

Happy flat-packing!

The Mocka Team

Need help? Our Support Team are available via live chat, email or phone. Visit our website for details.

AUSTRALIA

+61 7 3184 8466

Our phone lines are available
weekdays 9am to 5pm AEST



NEW ZEALAND

 
+64 3 384 1858

Our phone lines are available
weekdays 9am to 5pm NZT

Aspen

Change Table with Drawers

Thank you for your purchase. Please follow the instructions for correct assembly. While we took great effort to ensure these assembly instructions were correct at the time of printing, sometimes updates are required post production. For the most up to date versions please refer to the product page on our website. mocka.com.au/mocka.co.nz

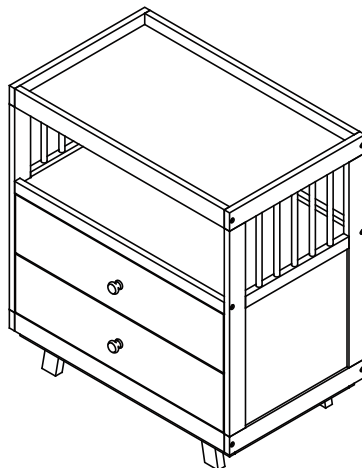

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Follow manufacturers instructions

The products should be assembled by an adult. Incorrect assembly may lead to an accident and pose a threat for children and other users.

WARNING: DO NOT LEAVE YOUR CHILD UNATTENDED.

WARNING: DO NOT USE THE CHANGE TABLE UNLESS ALL COMPONENTS ARE CORRECTLY FITTED AND ADJUSTED.

WARNING: REGULARLY INSPECT THE CHANGE TABLE FOR MAINTENANCE OF LOOSE SCREWS ETC.

WARNING: DO NOT USE SPARE PARTS OTHER THAN THOSE RECOMMENDED BY THE MANUFACTURER.

WARNING: DO NOT USE IF THE CHANGE TABLE IS NOT WORKING CORRECTLY OR HAS BROKEN OR MISSING PARTS IN THIS CASE OWNER MUST SEEK TO REPAIR THE CHANGE TABLE BEFORE USING.

WARNING: AVOIDING PLACING THE CHANGE TABLE NEAR NAKED HEAT SOURCES. SUCH AS ELECTRIC BAR FIRES. GAS FIRES. ETC OR WHERE A CHILD COULD GAIN ACCESS TO ANY OTHER KIND OF HAZARD. AVOID PLACING THE CHANGE TABLE NEAR OTHER FURNITURE. WALLS. HOT SURFACES OR LIQUIDS, WINDOW COVERING CORDS AND ELECTRICAL CORDS.

WARNING: RECOMMENDED AGE! UP TO 12 MONTHS AND MAX 11KGS

WARNING: RECOMMEND THE CORRECT SIZE CHANGING MAT TO FIT THIS CHANGE TABLE: 78CM X 46CM X 10CM

MEETS STANDARD : EN 12221-1:2008+A1:2013 & EN 12221-2:2008+A1:2013

MODEL NAME & NUMBER: ASPEN CHANGE TABLE WITH DRAWERS - A03679

WARNING

Children have died from furniture toppling over.

- **ALWAYS** secure this furniture with an anchor device.
- **NEVER** allow children to stand, climb or hang on drawers, doors or shelves.
- **NEVER** open more than one drawer at a time.
- Place heavy items down low.
- **NEVER** place a television on this furniture.



Aspen

Change Table with Drawers

WARNING: THIS UNIT HAS BEEN DESIGNED AT AN ADEQUATE HEIGHT FOR AN ADULT TO CHANGE A BABY ONCE PLACED ON THE CHANGING TRAY AND ON THE RECOMMENDED CHANGE MAT SIZE.

WARNING: THIS FURNITURE ITEM CAN BECOME UNSTABLE AND MAY TOPPLE IF CLIMBED UPON AND CAN BE ESPECIALLY DANGEROUS TO CHILDREN. SERIOUS INJURY OR DEATH MAY RESULT.

 
WARNING: IT IS UNDESIRABLE TO PLACE OBJECTS OF INTEREST TO CHILDREN IN VIEW ON THIS TYPE OF FURNITURE ITEM, AS CHILDREN MAY BE TEMPTED TO CLIMB TO RETRIEVE THE OBJECTS THE RESULT BEING THAT THE FURNITURE ITEM MAY TIP AND CAUSE INJURY OR DEATH.

WARNING: FURNITURE ITEMS CAN TIP UNDER CERTAIN CIRCUMSTANCES, ESPECIALLY WHEN PLACED ON CARPET, UNEVEN OR SLOPING FLOORING, OR WHEN SUBJECT TO EXTREME USE SUCH AS DRAGGING.

WARNING: ATTACHMENT OF THE FURNITURE ITEM TO AN APPROPRIATE STRUCTURAL COMPONENT OF THE BUILDING USING SUITABLE MEANS, AS ADVISED BY A QUALIFIED TRADESPERSON, IS STRONGLY RECOMMENDED.

CARE INSTRUCTIONS: REGULARLY WIPE DOWN YOUR CHANGE TABLE WITH A DAMP CLOTH AND THEN DRY WITH A CLEAN WHITE CLOTH.

Panel Layout



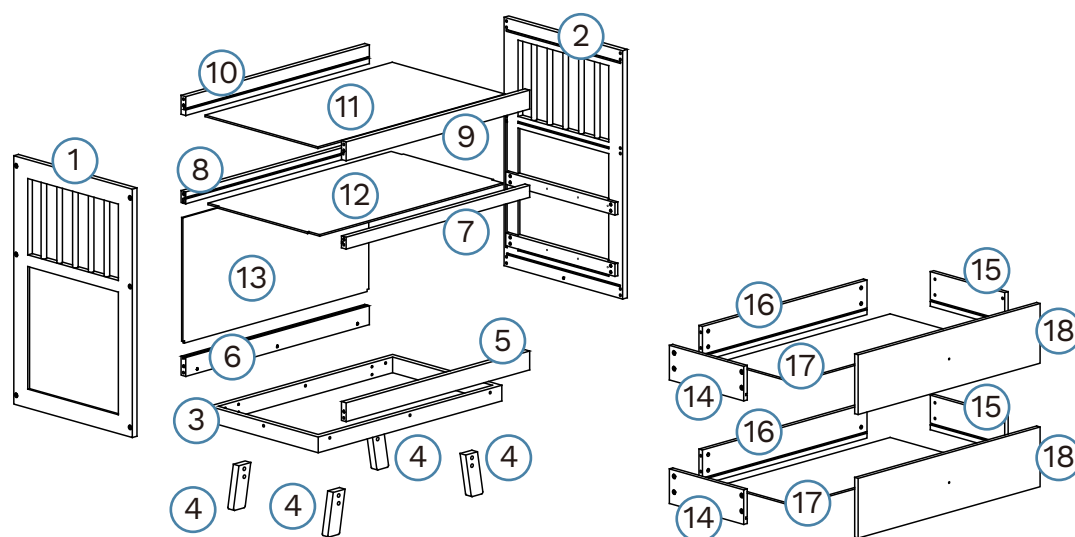


①	Left End Panel	x1
②	Right End Panel	x1
③	Bottom Frame	x1
④	Leg	x4
⑤	Rail	x1
⑥	Rail	x1
⑦	Rail	x1
⑧	Rail	x1
⑨	Rail	x1

⑩	Rail	x1
⑪	Shelf Panel	x1
⑫	Shelf Panel	x1
⑬	Back Panel	x1
⑭	Left Drawer Side	x2
⑮	Right Drawer Side	x2
⑯	Drawer Back	x2
⑰	Drawer Base	x2
⑱	Drawer Front	x2

Aspen

   
Change Table with Drawers

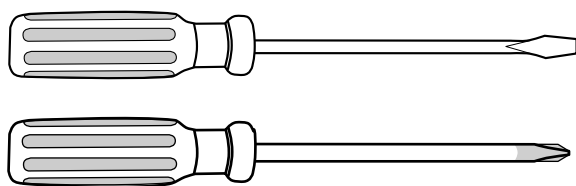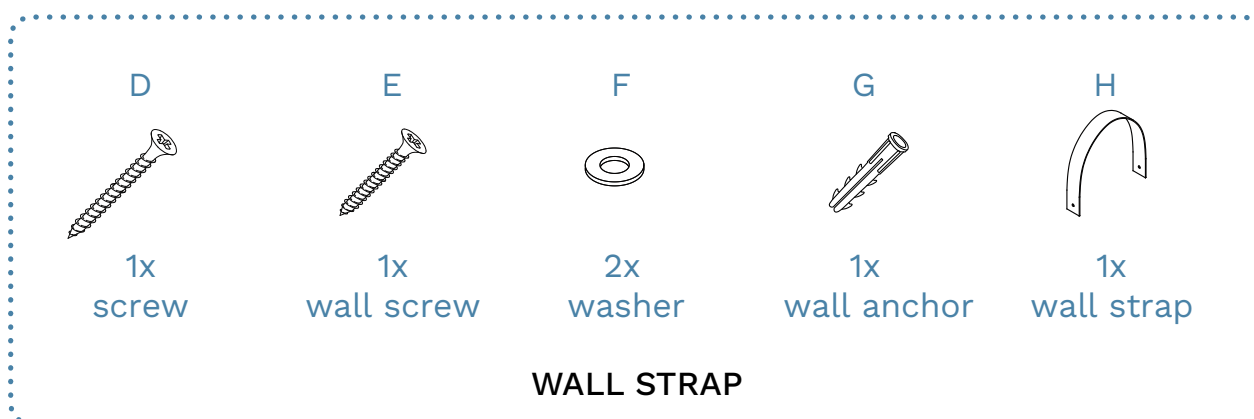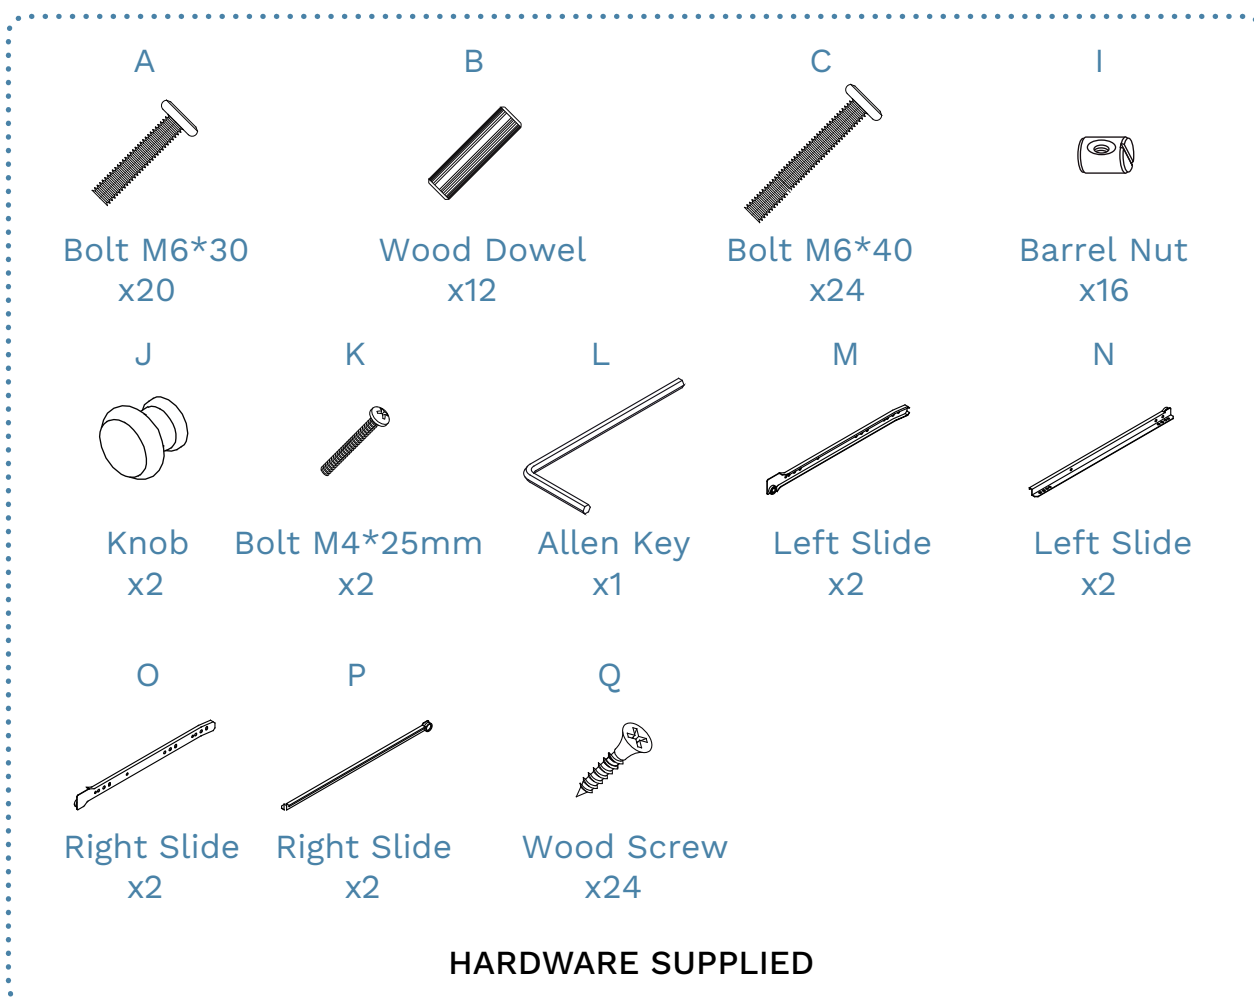

Phillips & Flathead screwdrivers required.
For quicker assembly, we recommend the
use of a power drill on a low-speed setting.


Aspen Change Table with Drawers

 1

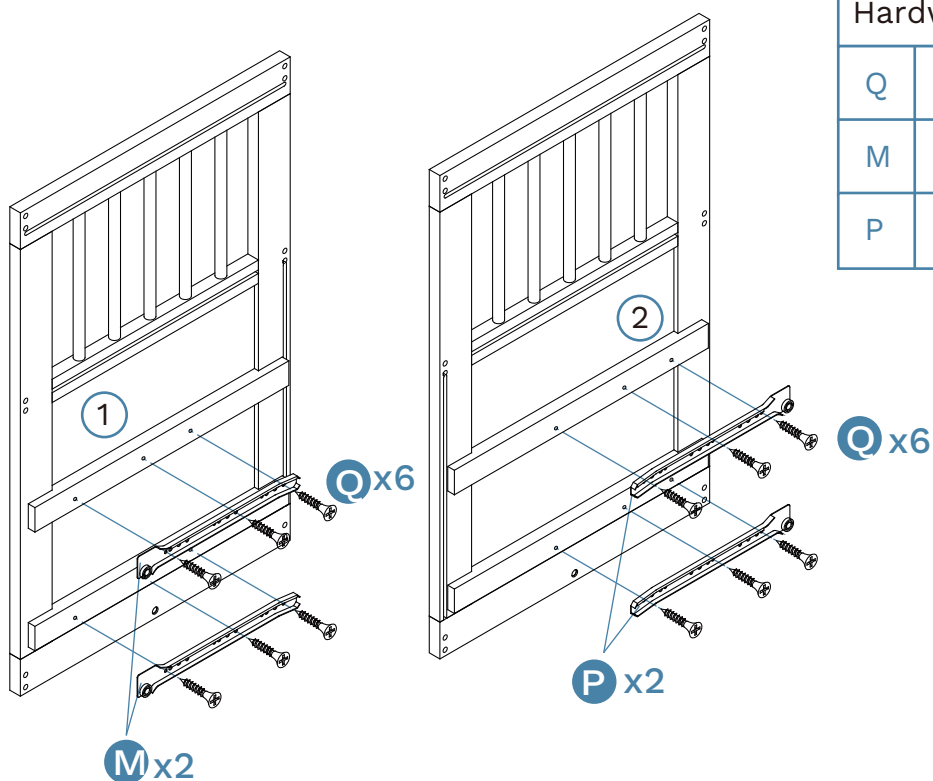

Hardware Needed		
Q		x12
M		x2
P		x2

 
2

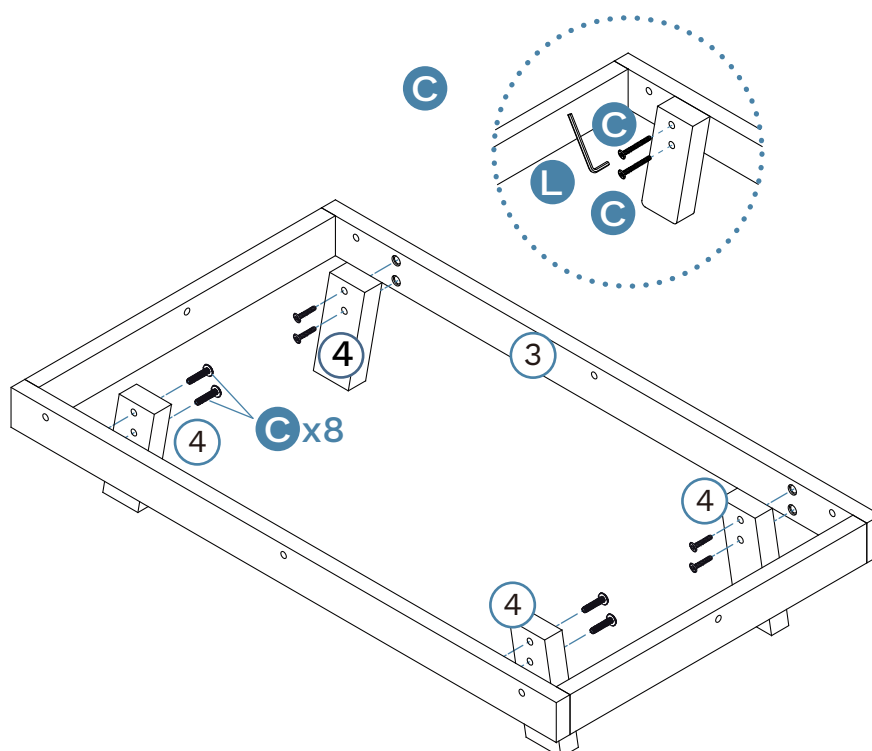


Hardware Needed		
C		x8

Aspen Change Table with Drawers

 
3

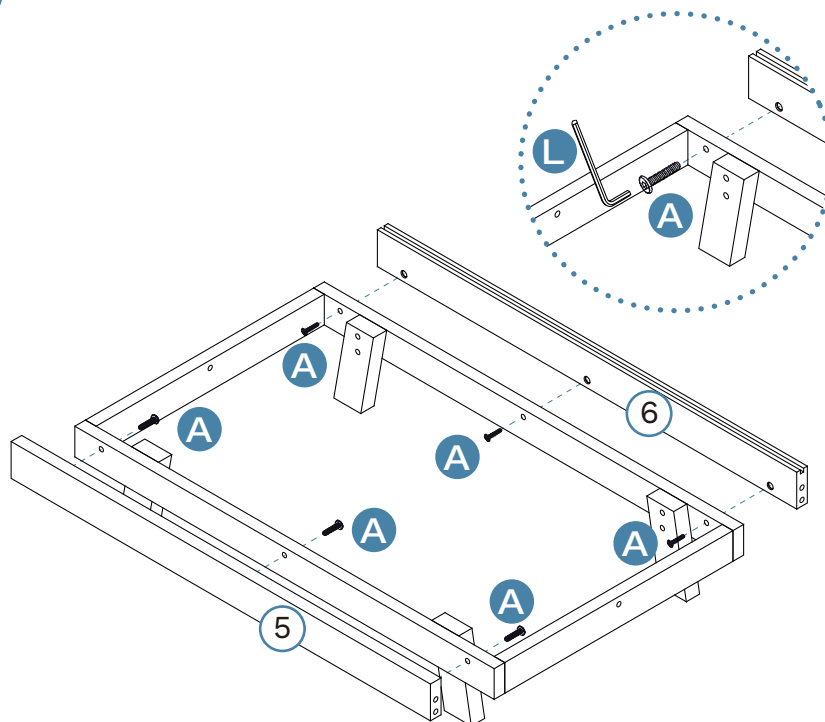



Hardware Needed

A		x6
---	---	----

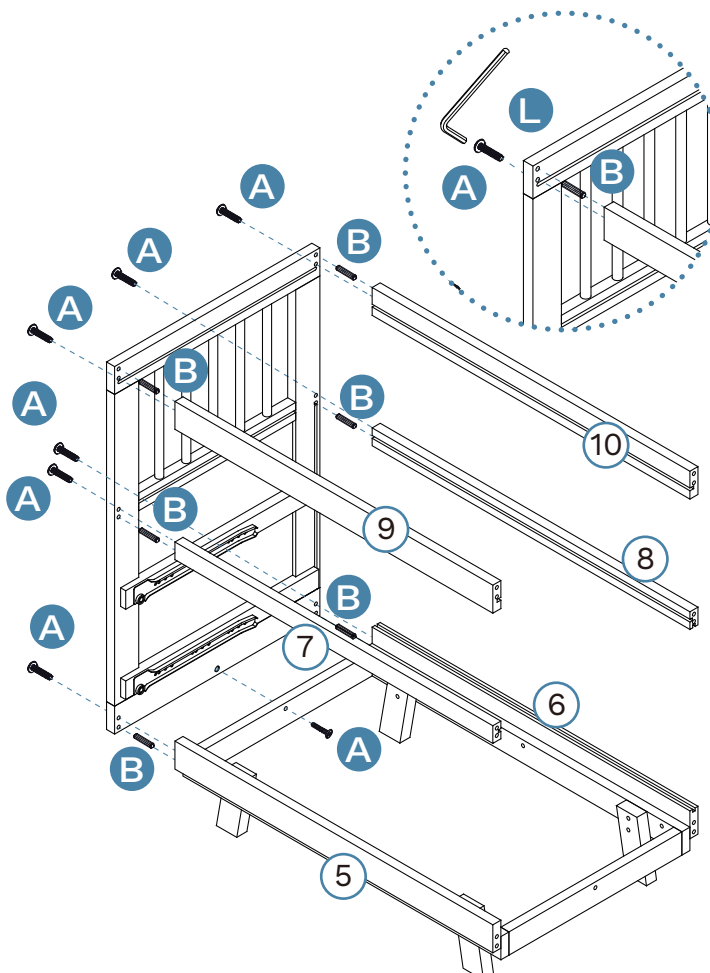 4




Hardware Needed


A		x7
B		x6

 Aspen Change Table with Drawers

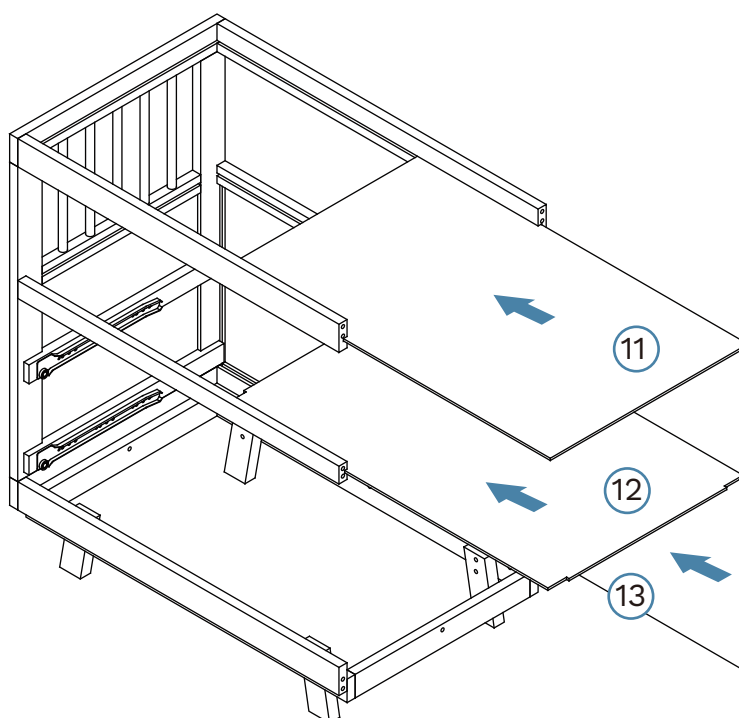

5

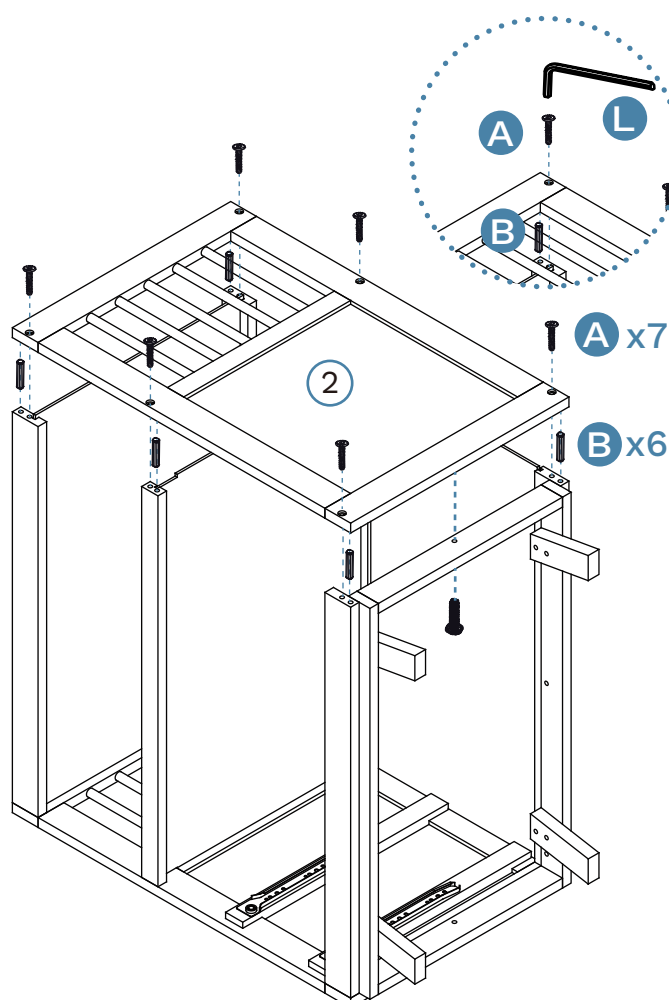 



6



Hardware Needed


A		x7
B		x6

   Aspen Change Table with Drawers

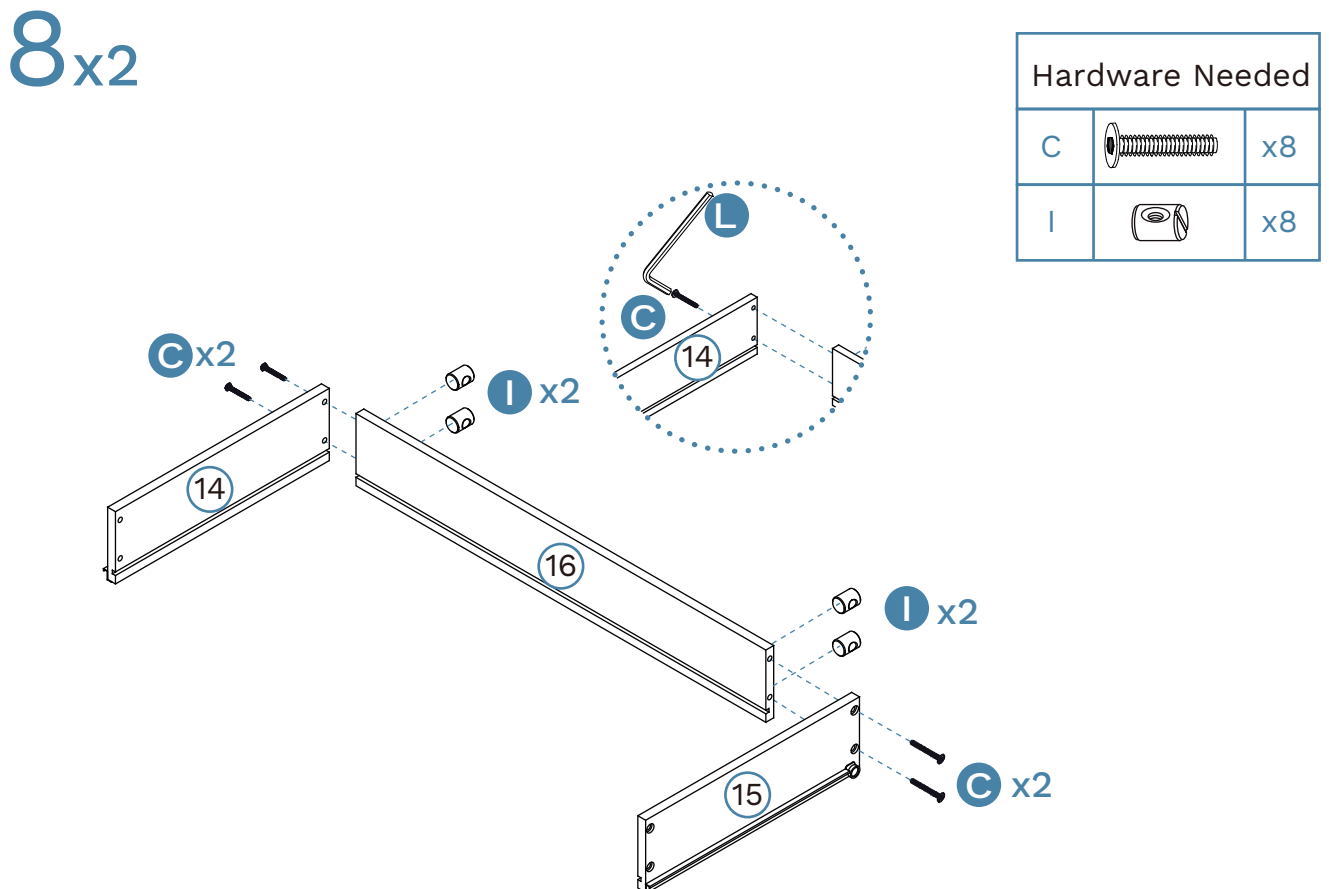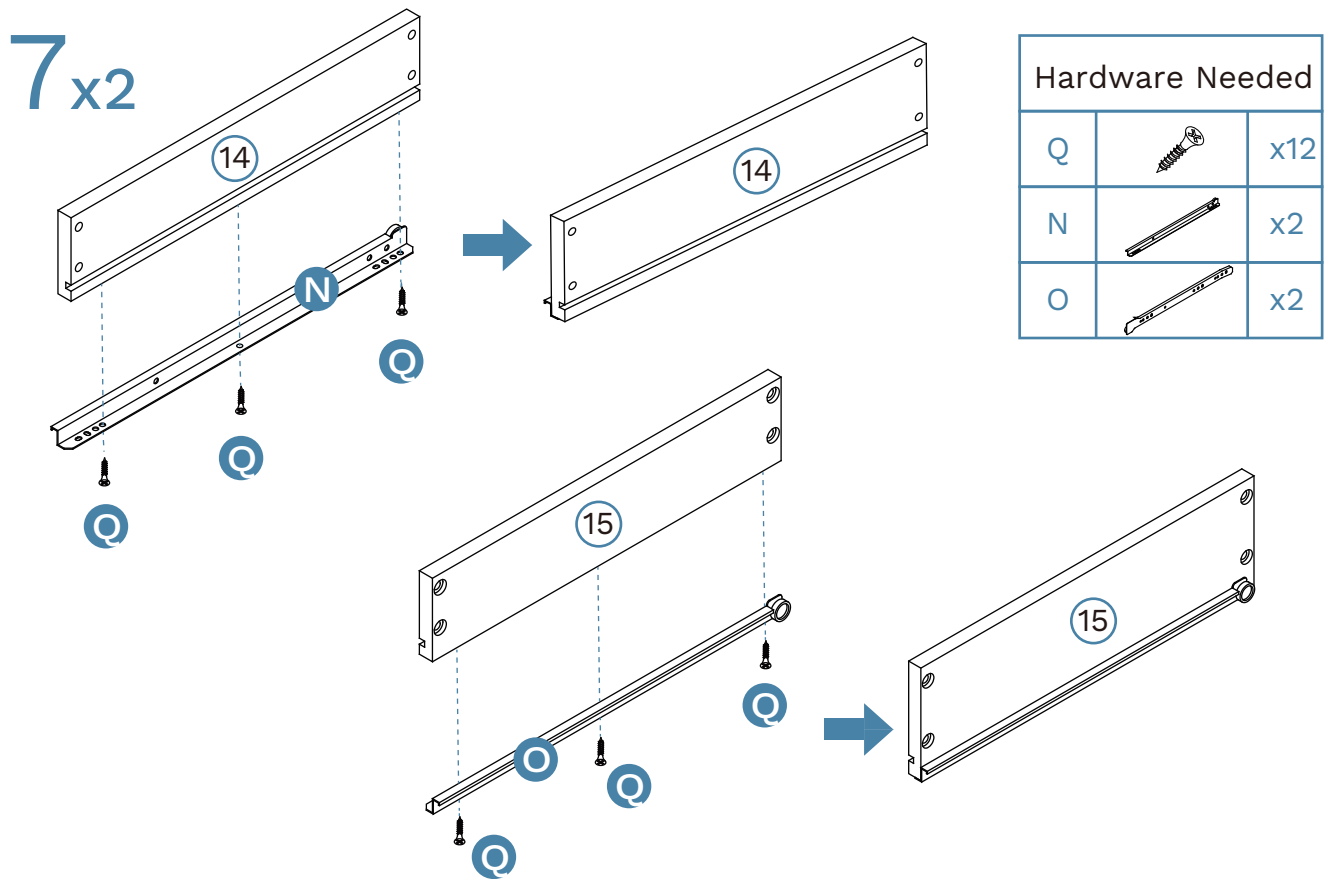




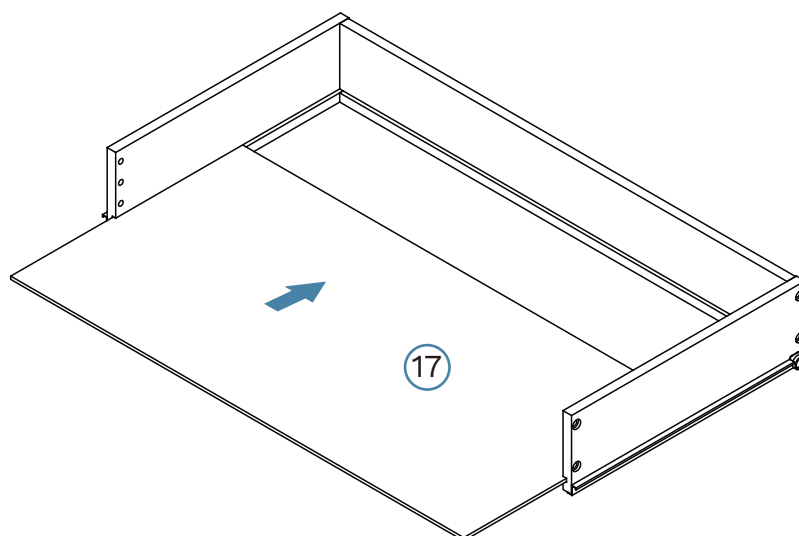

Aspen Change Table with Drawers

 9x2

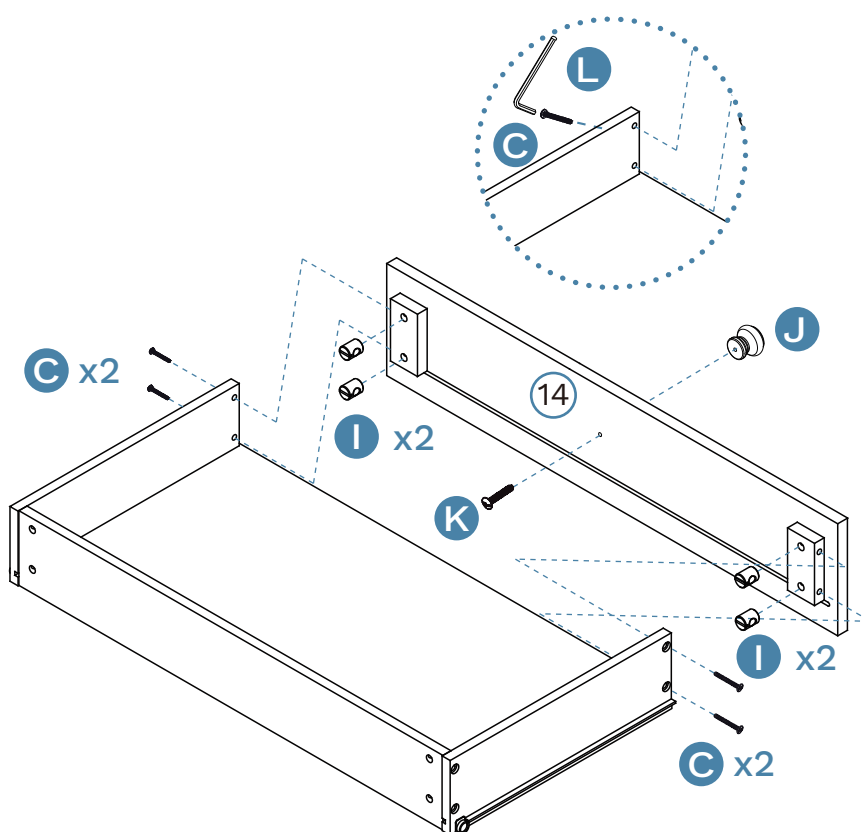



10x2



Hardware Needed		
C		x8
I		x8
J		x2
K		x2



Aspen Change Table with Drawers

  11

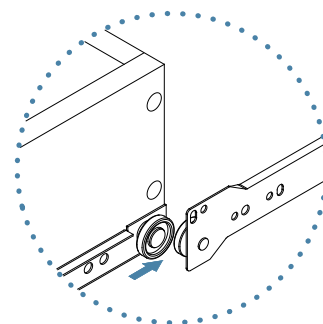
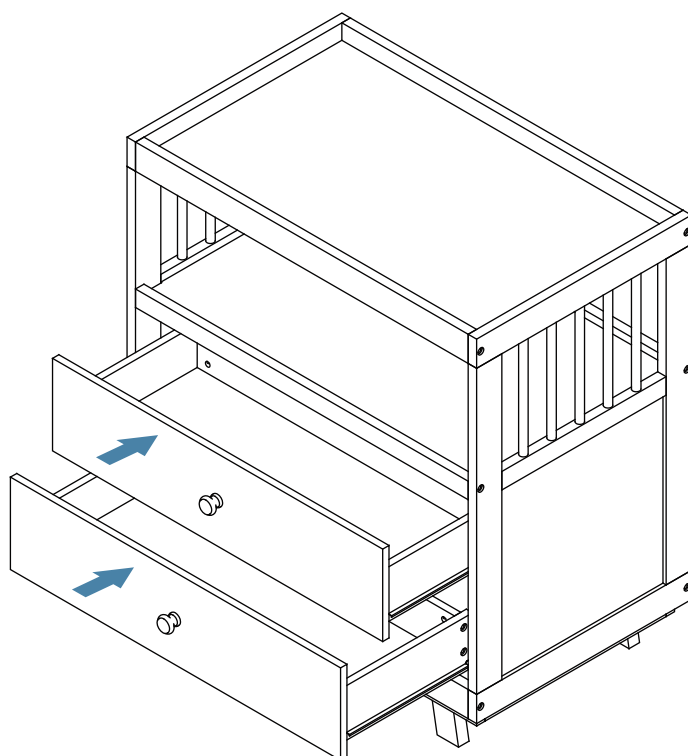




  
Carefully insert the drawers into the unit by gently guiding the runners into the tracks.

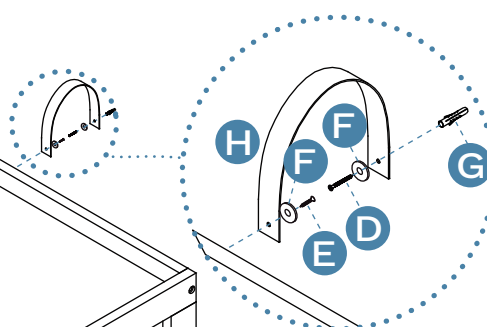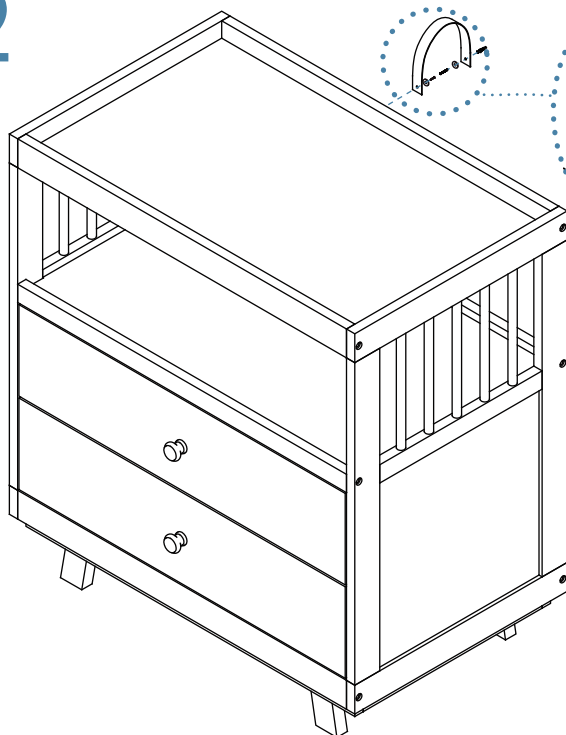12

  

Hardware Needed

D		x1
E		x1
F		x2
G		x1
H		x1

Once assembled lift furniture into place, do not drag. Attach wall strap (H) to side panel [2] with 1x washer (F) and 1x screw (D). Use a drill to create a small hole lining up with the safety strap (H). Fasten to wall using 1x wall anchor (G), 1x washer (F) and 1x wall screw (E). Ensure unit is balanced and steady before use. You're done, enjoy!



Love it for longer.

Remove all liquid and food spills immediately **ONLY** with a clean, damp, undyed white cloth.
Do **NOT** use abrasives or common household detergents.



Caring for our world.

In the interest of our environment, please dispose of all packaging thoughtfully.



Good news, you're all done!

Love it and share it on Instagram by tagging

 @mockaaustralia | @mockanz