


Mocka.

Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to safety testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create beautifully functional spaces to feel comfortably you.

Here are a few assembly tips before you get started:

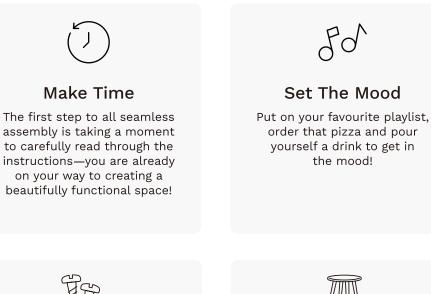



Tool Check

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



Room Reveal

You did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging and share a pic of your room reveal—we love seeing how you transform your home! **Tag us** @mockaaustralia/@mockaanz

Happy flat-packing!

The Mocka Team

Need help? Our Support Team are available via live chat, email or phone. Visit our website for details.

AUSTRALIA +61 7 3184 8466 Our phone lines are available weekdays 9am to 5pm AEST



NEW ZEALAND +64 3 384 1858 Our phone lines are available weekdays 9am to 5pm NZT

Thank you for your purchase. Please follow the instructions for correct assembly. While we took great effort to ensure these assembly instructions were correct at the time of printing, sometimes updates are required post production. For the most up to date versions please refer to the product page on our website. mocka.com.au/mocka.co.nz




Children have died from furniture toppling over.


- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors or shelves.
- **NEVER** open more than one drawer at a time.
- Place heavy items down low.
- **NEVER** place a television on this furniture.






Panel Layout

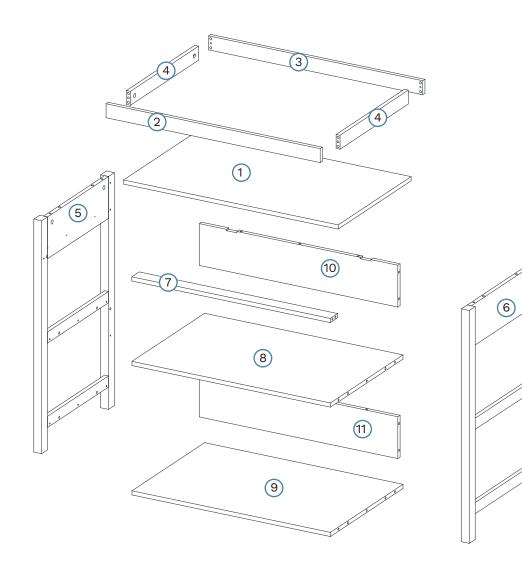


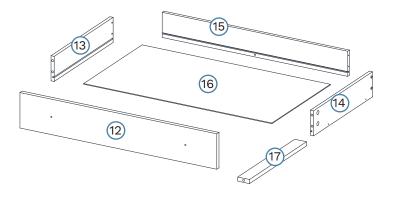



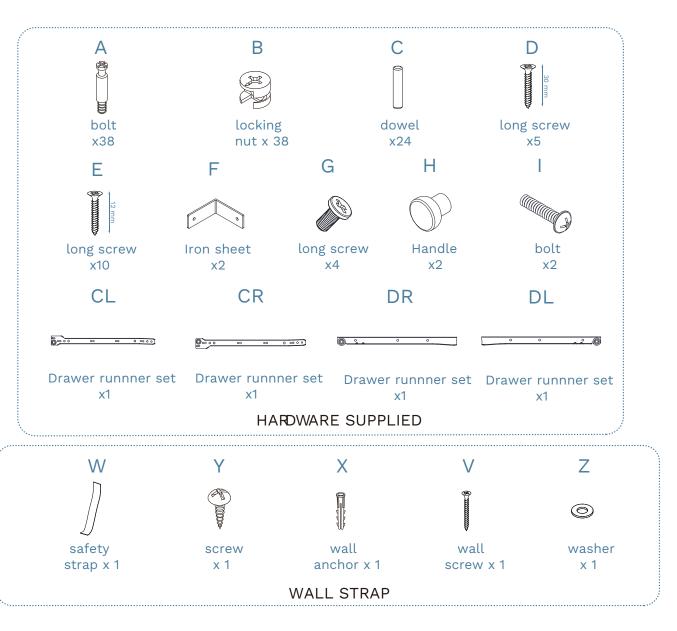


WARNINGAny furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall. We supply a free safety wall anchor with all furniture sold and we recommend these are used to prevent your product tipping. The fixing device provided should fit most wall types, but please note that different wall materials may require different fixing devices from those supplied.

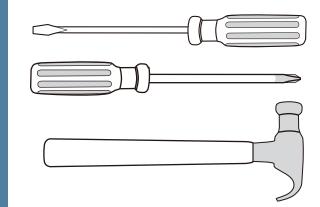



Phillips & Flathead screwdrivers and hammer required For quicker assembly, we recommend the use of a power drill on a low-speed setting.



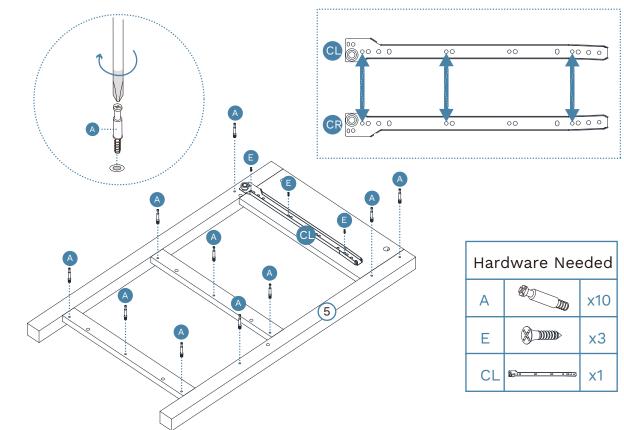


Please assemble it on a rug or other soft surface to avoid marking.

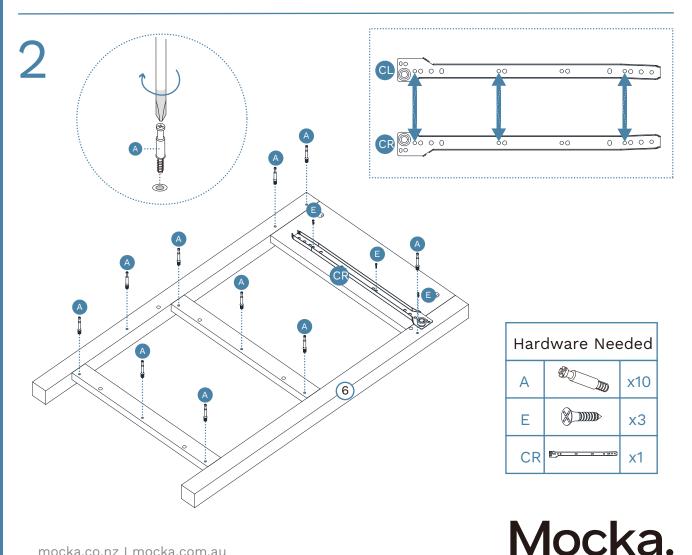


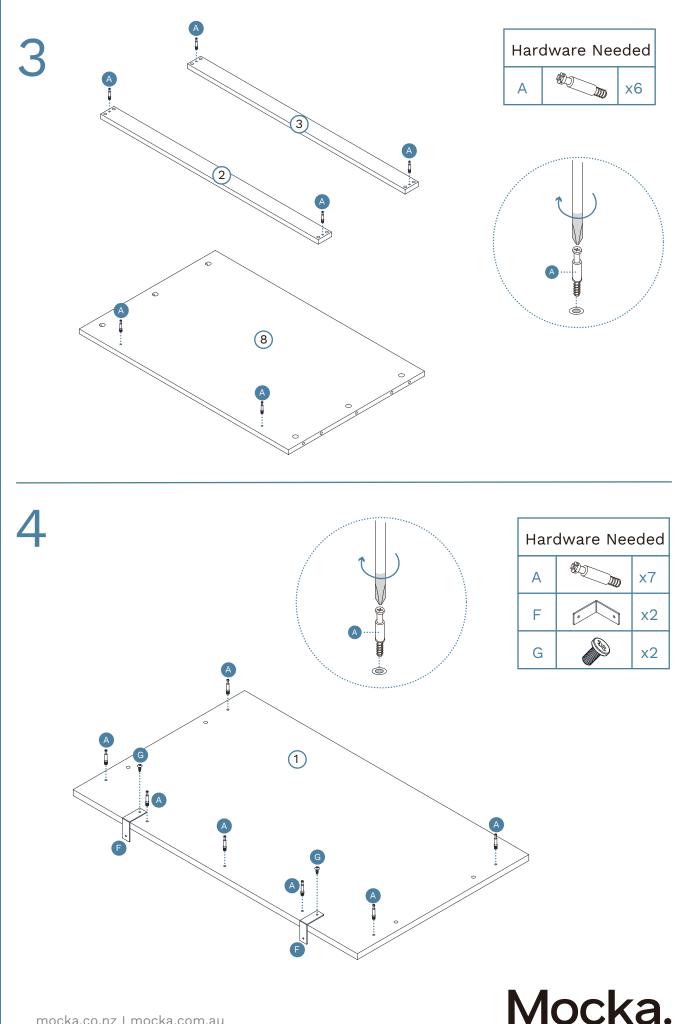


5



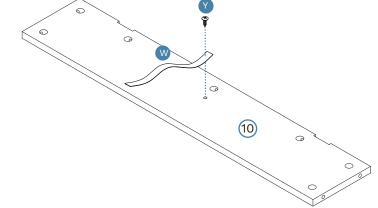


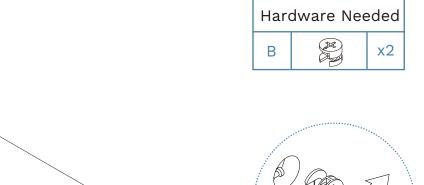


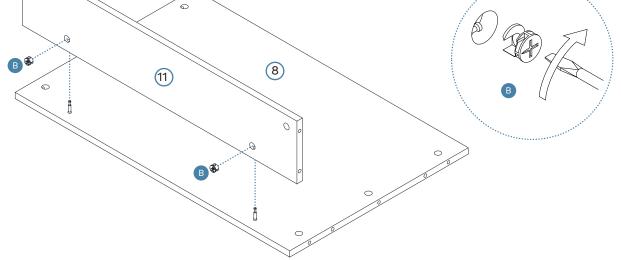




Mocka Change Table

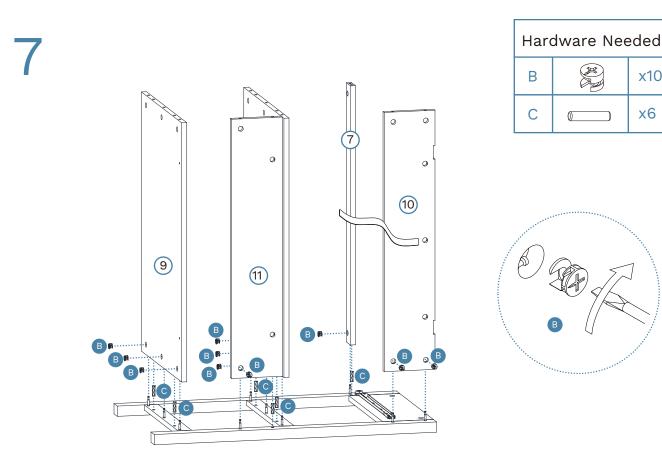

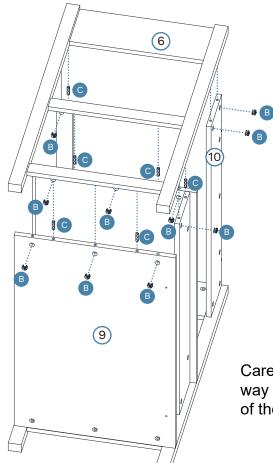

Hard	Hardware Needed		
В	H.	x10	
С		x6	

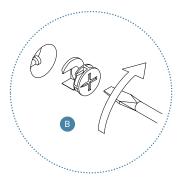


Carefully turn the wardrobe the right way up whilst supporting the weight of the cabinet.





9


Mocka Change Table

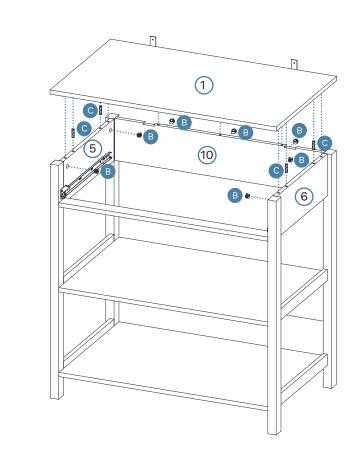

Hard	Hardware Needed		
В	E A	x7	
С		x4	

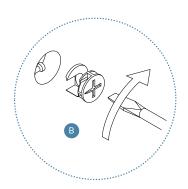

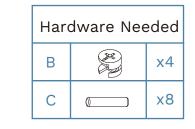


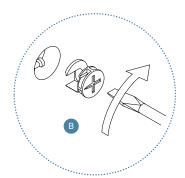




В


11

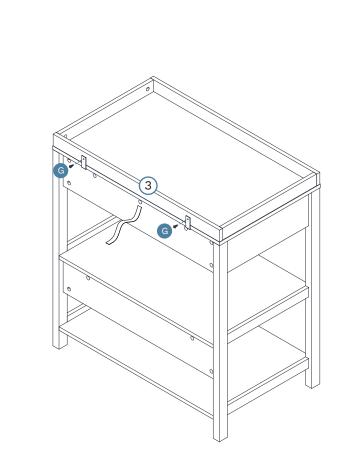






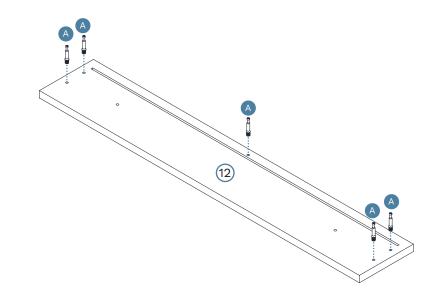


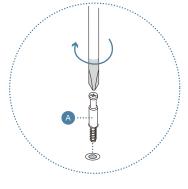




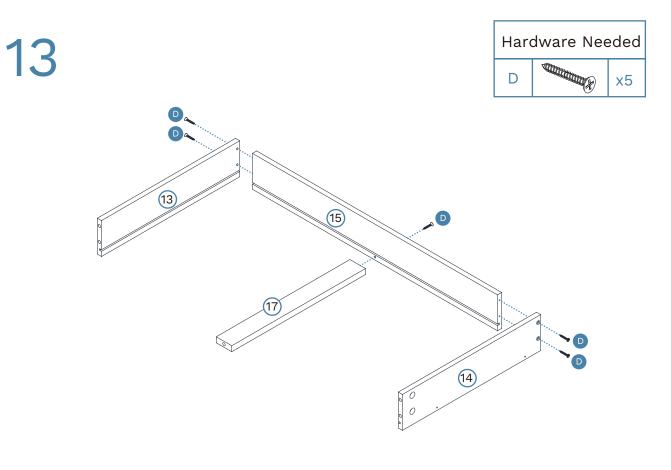





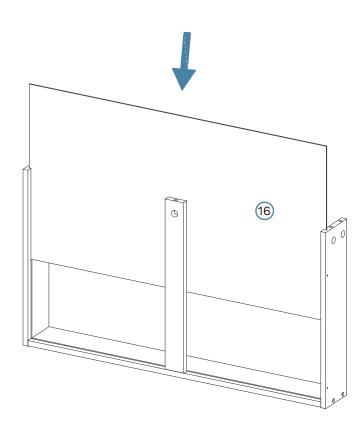




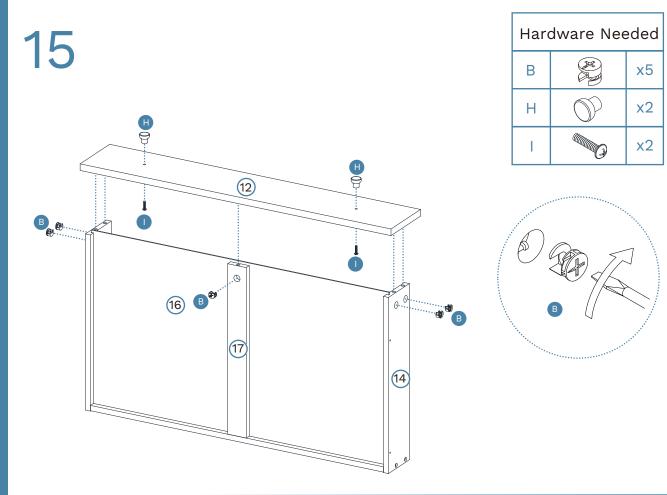

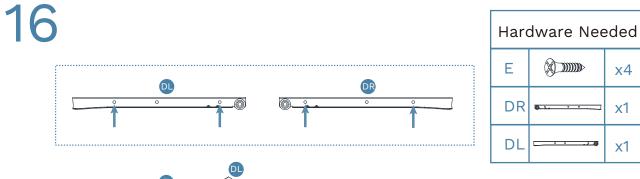

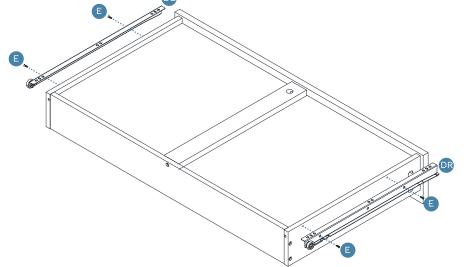



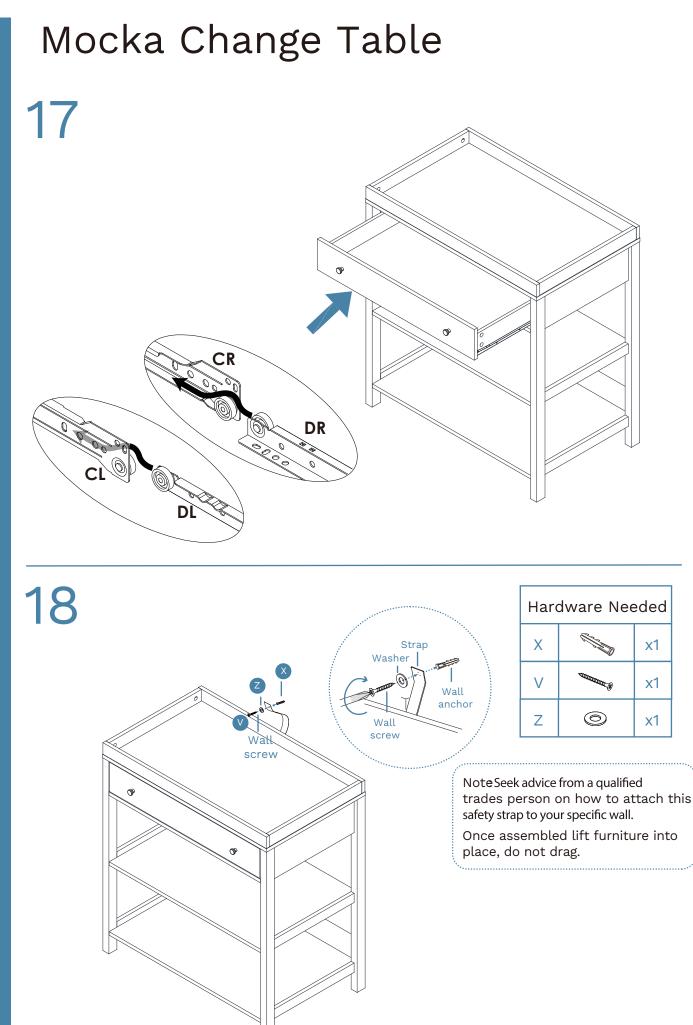





Remove all liquid and food spills immediately ONLY with a clean, damp, undyed white cloth. Do NOT use abrasives or common household detergents.



Caring for our world.

In the interest of our environment, please dispose of all packaging thoughtfully.



Love it and share it on Instagram by tagging

🗿 @mockaaustralia | @mockanz