 
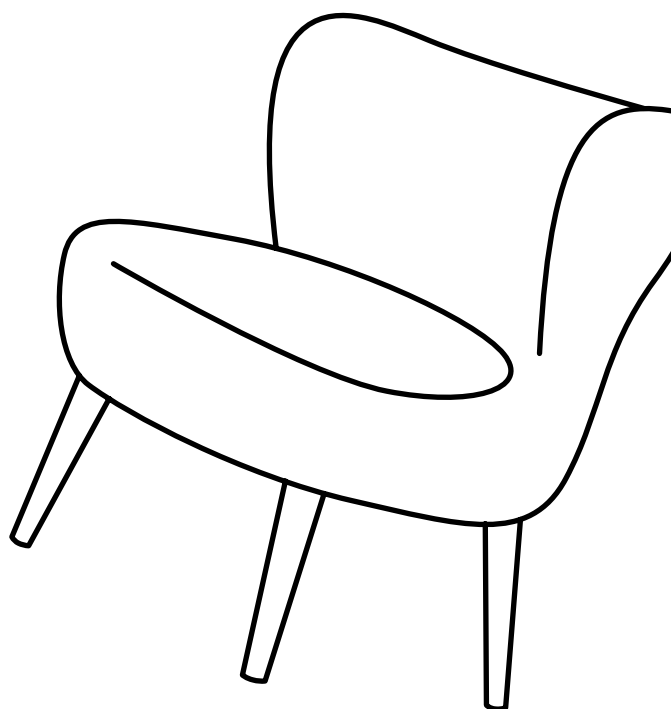 


Hello, I've arrived!

Now that I'm here you are only one
flat-pack away from transforming
your home.

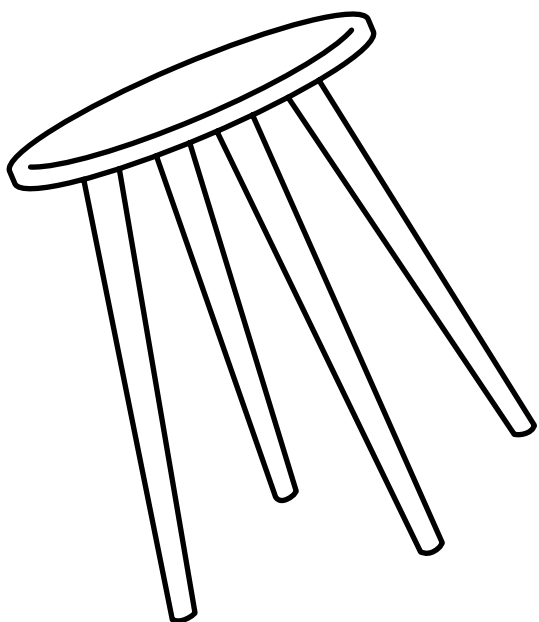

Mocka.

Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to safety testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create beautifully functional spaces to feel comfortably you.

Here are a few assembly tips before you get started:



Make Time

The first step to all seamless assembly is taking a moment to carefully read through the instructions—you are already on your way to creating a beautifully functional space!



Set The Mood

Put on your favourite playlist, order that pizza and pour yourself a drink to get in the mood!



Tool Check

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



Room Reveal

You did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging and share a pic of your room reveal—we love seeing how you transform your home! **Tag us @mockaaustralia/@mockaanz**

Happy flat-packing!

The Mocka Team

Need help? Our Support Team are available via live chat, email or phone. Visit our website for details.

AUSTRALIA

+61 7 3184 8466

Our phone lines are available
weekdays 9am to 5pm AEST



NEW ZEALAND

 
+64 3 384 1858

Our phone lines are available
weekdays 9am to 5pm NZT

Rhodes

Entertainment Unit

Thank you for your purchase. Please follow the instructions for correct assembly. While we took great effort to ensure these assembly instructions were correct at the time of printing, sometimes updates are required post production. For the most up to date versions please refer to the product page on our website. mocka.com.au/mocka.co.nz

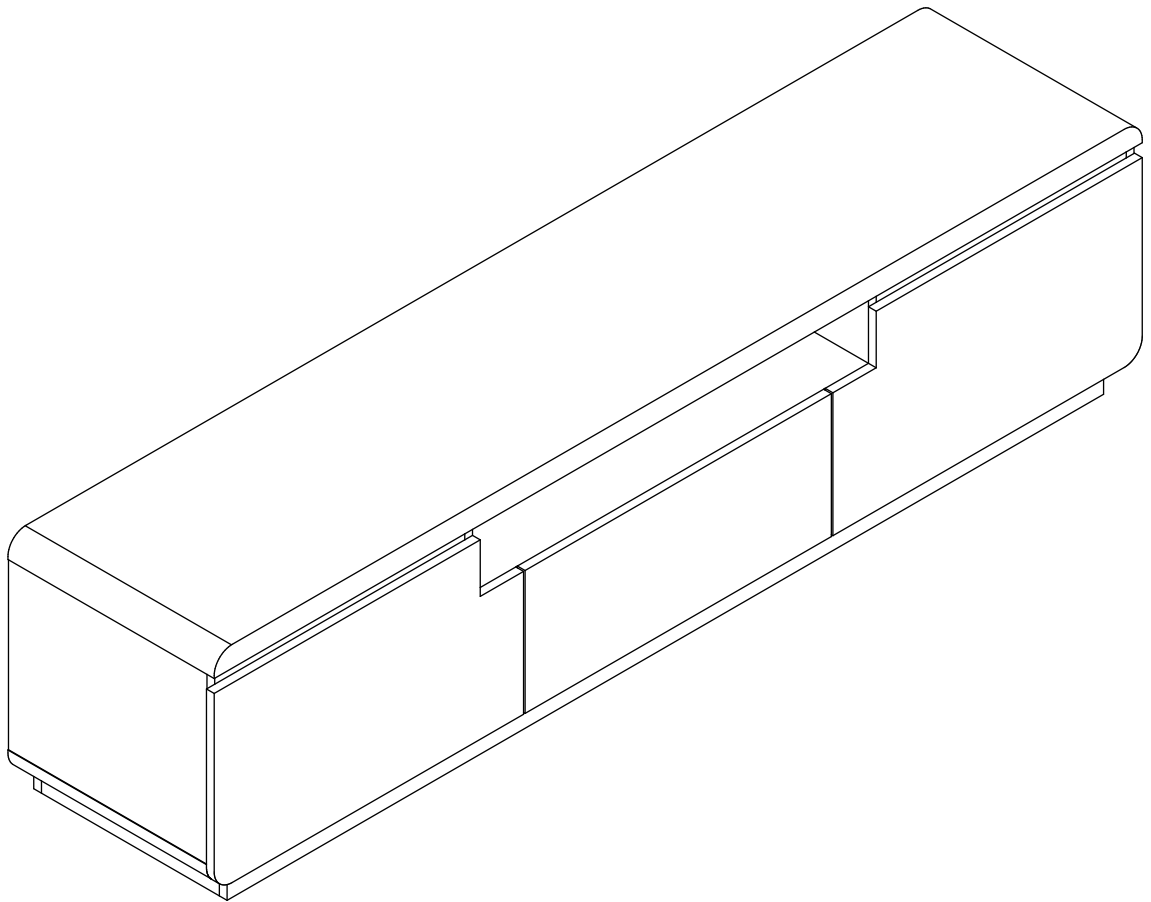

WARNING

Children have died from furniture toppling over.

 
- **ALWAYS** secure this furniture with an anchor device.
- **NEVER** allow children to stand, climb or hang on drawers, doors or shelves.
- **ALWAYS** secure your television with an anchor device



Rhodes





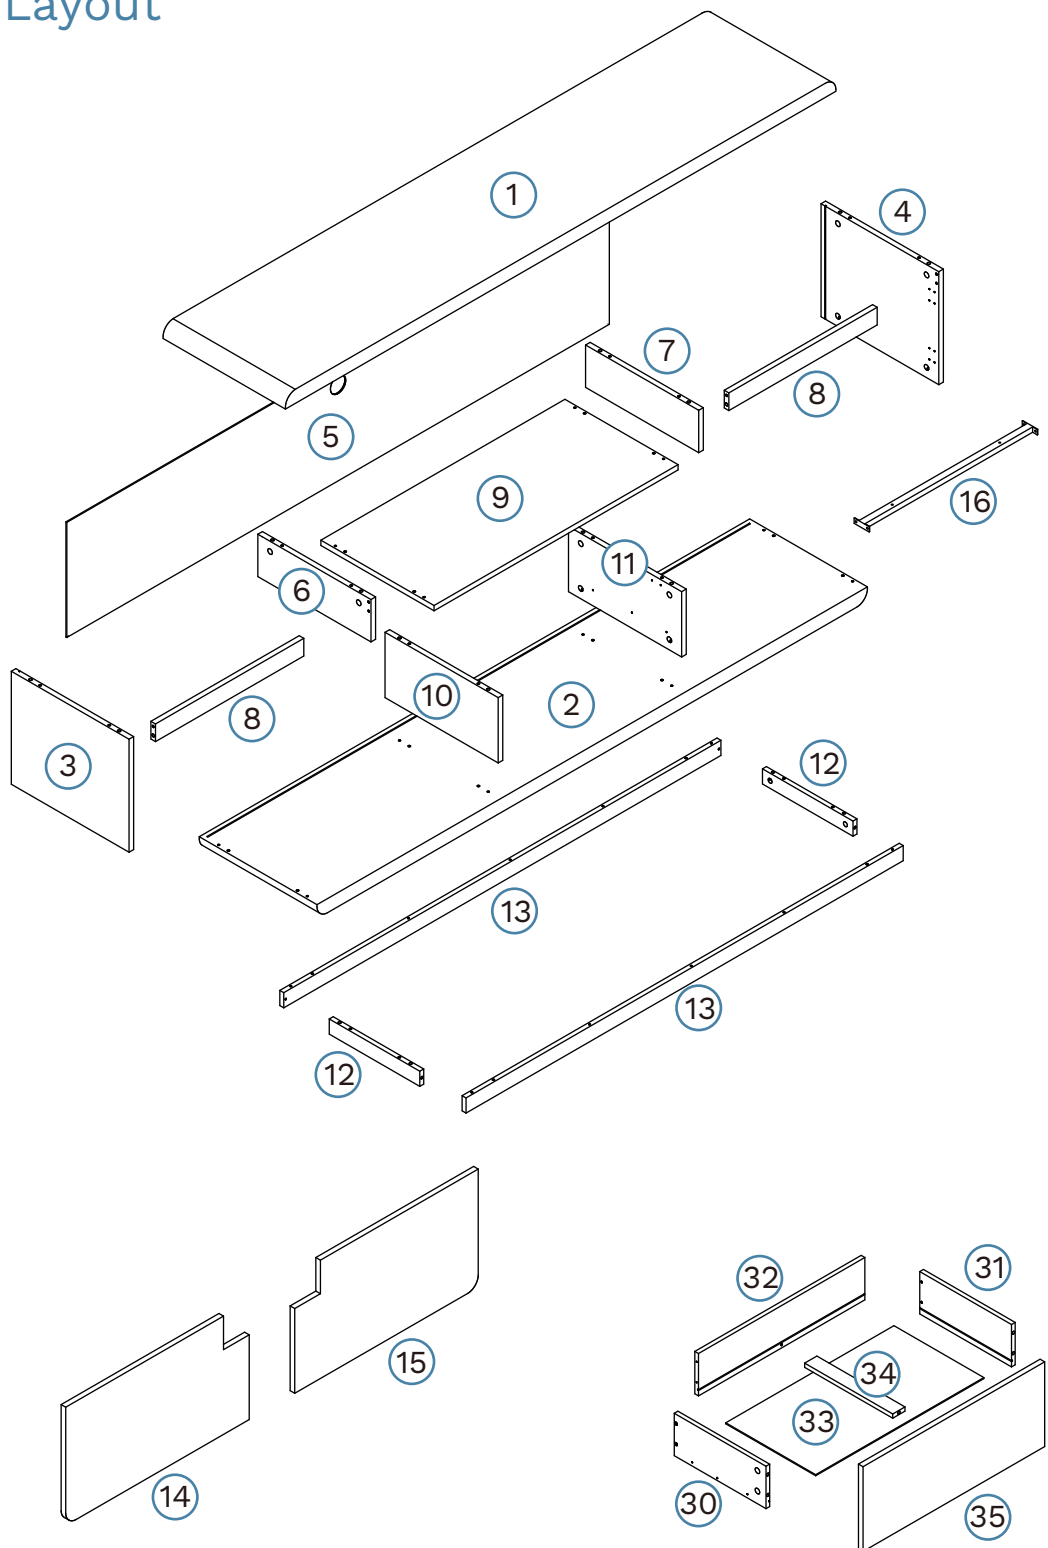












Entertainment Unit






Panel Layout



 
Rhodes

Entertainment Unit

A	B	C	D	E	F	G	H	
								
dowel x36	screw x18	bolt x33	locking nut x33	screw x12	screw x5	wedge x4	screw x4	
I	J	K	L	M	CL	CR	DL	DR
								
plastic glide x6	screw x24	hinge x4	screw x4	screw x2	slide rail x1	slide rail x1	slide rail x1	slide rail x1
HARDWARE SUPPLIED								

V	W	X	Y	Z
				
safety strap x 2	screw x 2	wall anchor x 2	wall screw x 2	washer x 4
WALL STRAP				

WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall. We supply a free safety wall anchor with all furniture sold and we recommend these are used to prevent your product tipping. The fixing device provided should fit most wall types, but please note that different wall materials may require different fixing devices from those supplied.

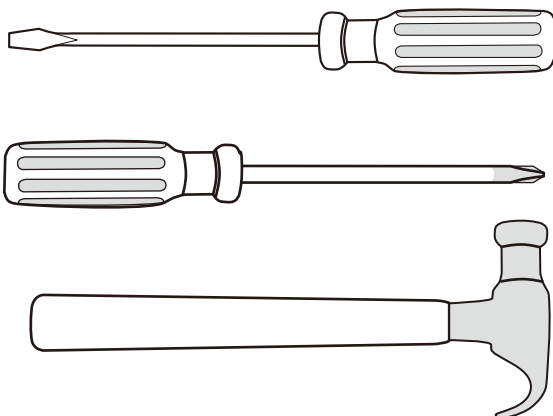 


Phillips & Flathead screwdrivers
and hammer required




**For quicker assembly, we recommend the
use of a power drill on a low-speed setting.**

Rhodes Entertainment Unit

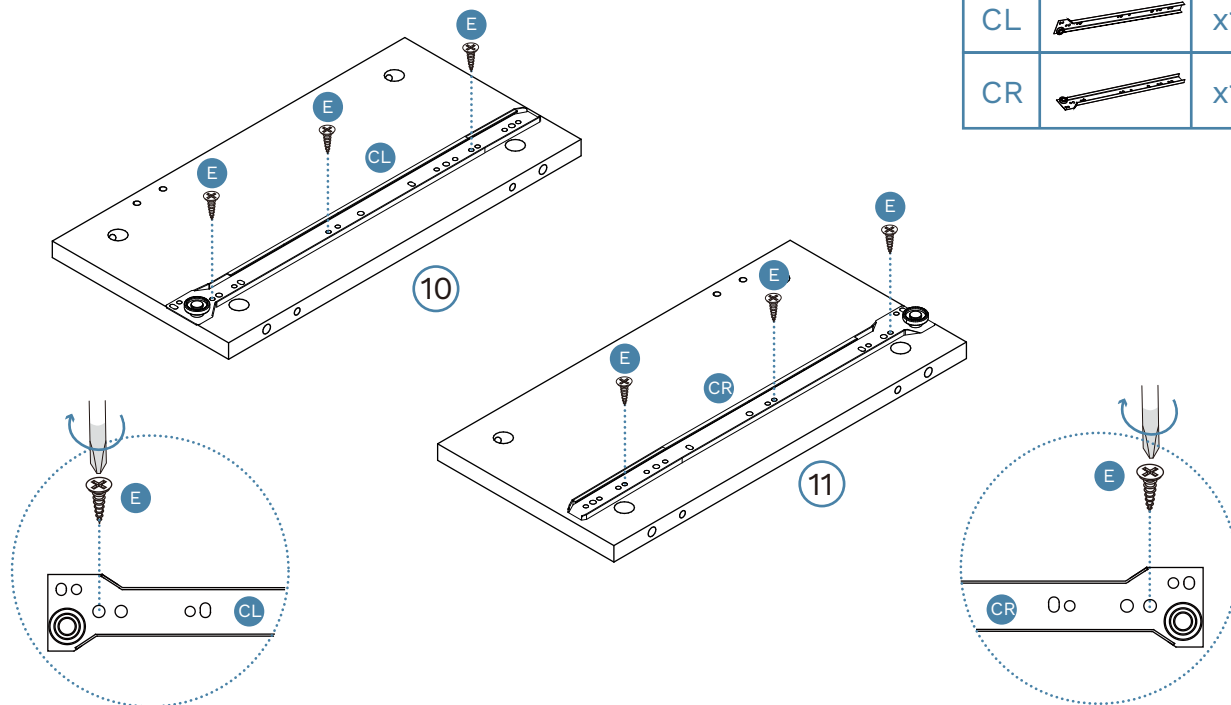 
1




Hardware Needed

E		x6
CL		x1
CR		x1

2

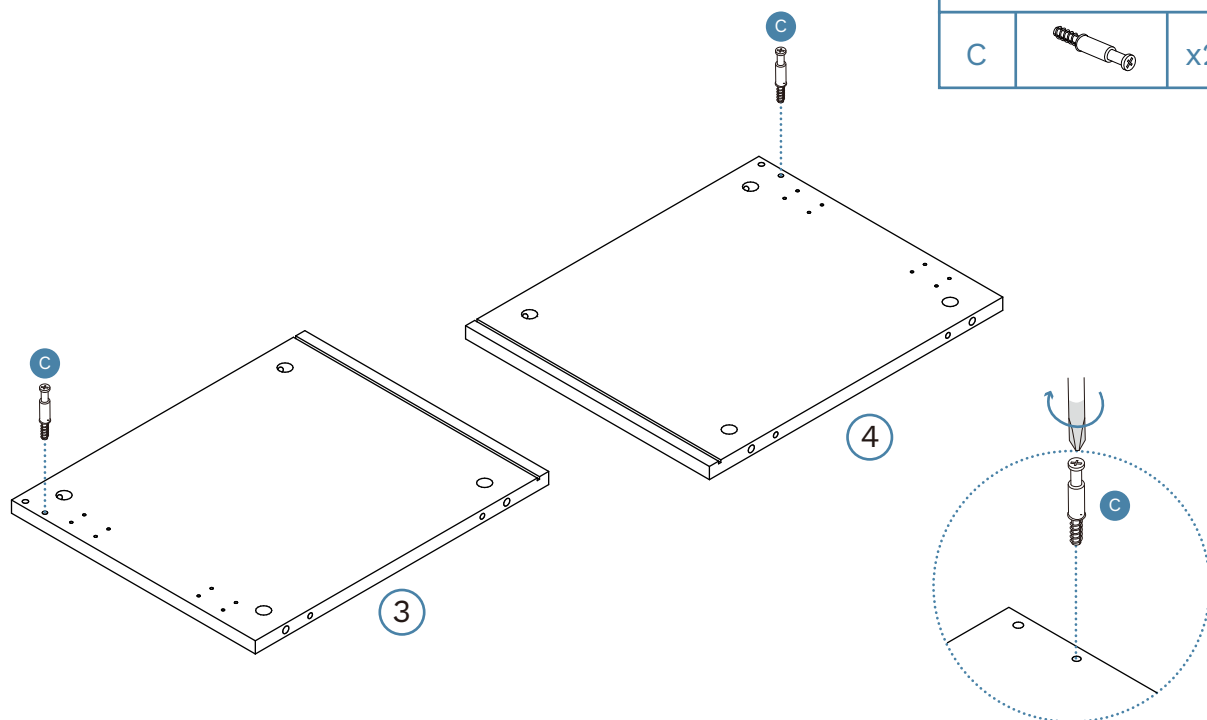 


Hardware Needed


C		x2
---	---	----

 
Rhodes Entertainment Unit

3

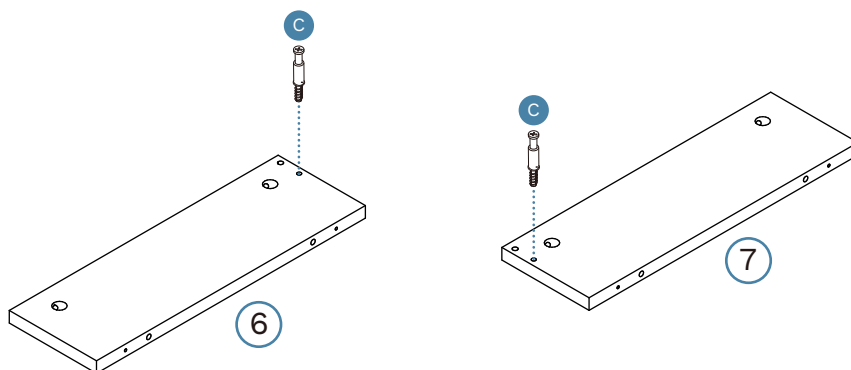 


Hardware Needed

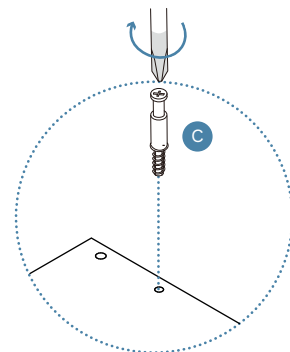

C		x2
---	---	----

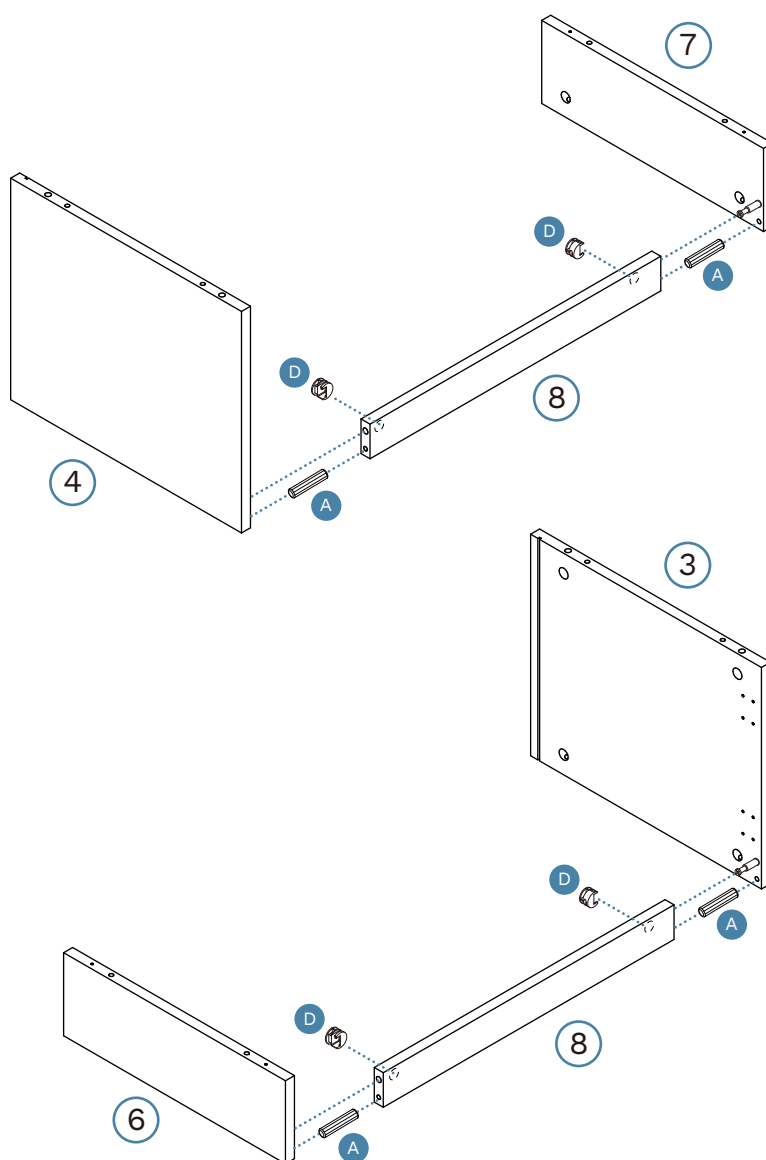 


4



 
Hardware Needed

A		x4
D		x4

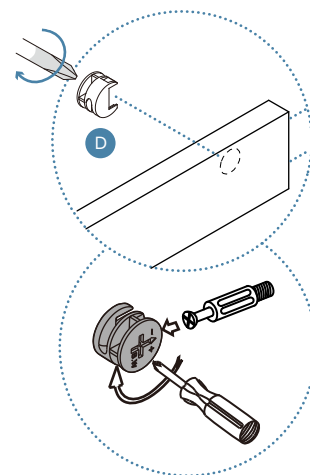


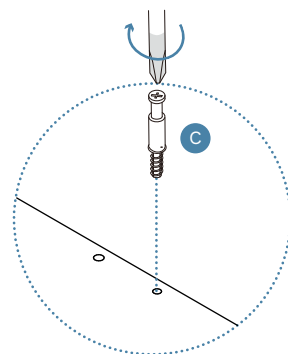 
Rhodes Entertainment Unit

5

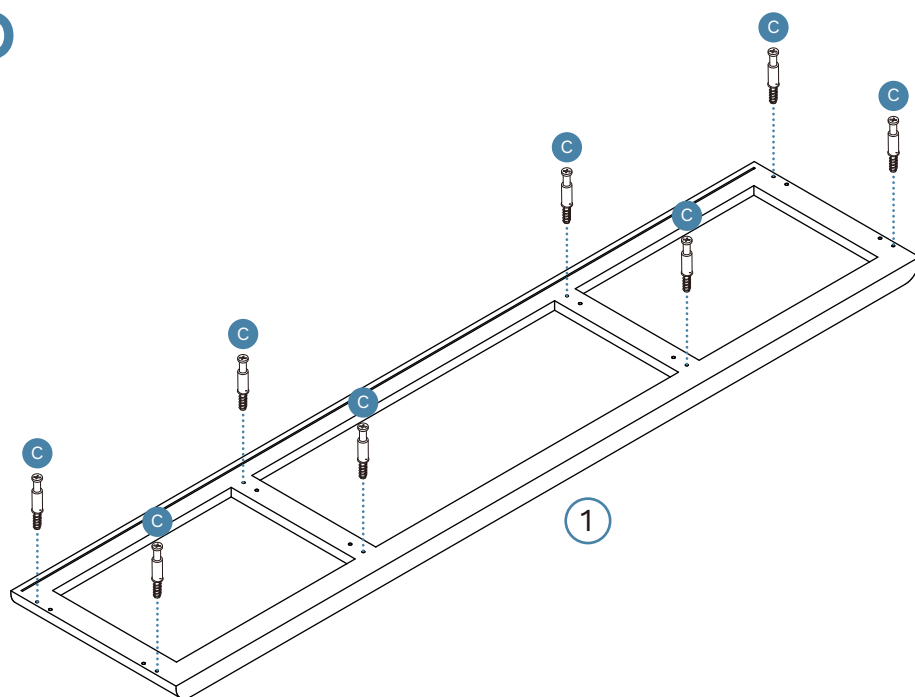 


Hardware Needed



C		x8
---	---	----

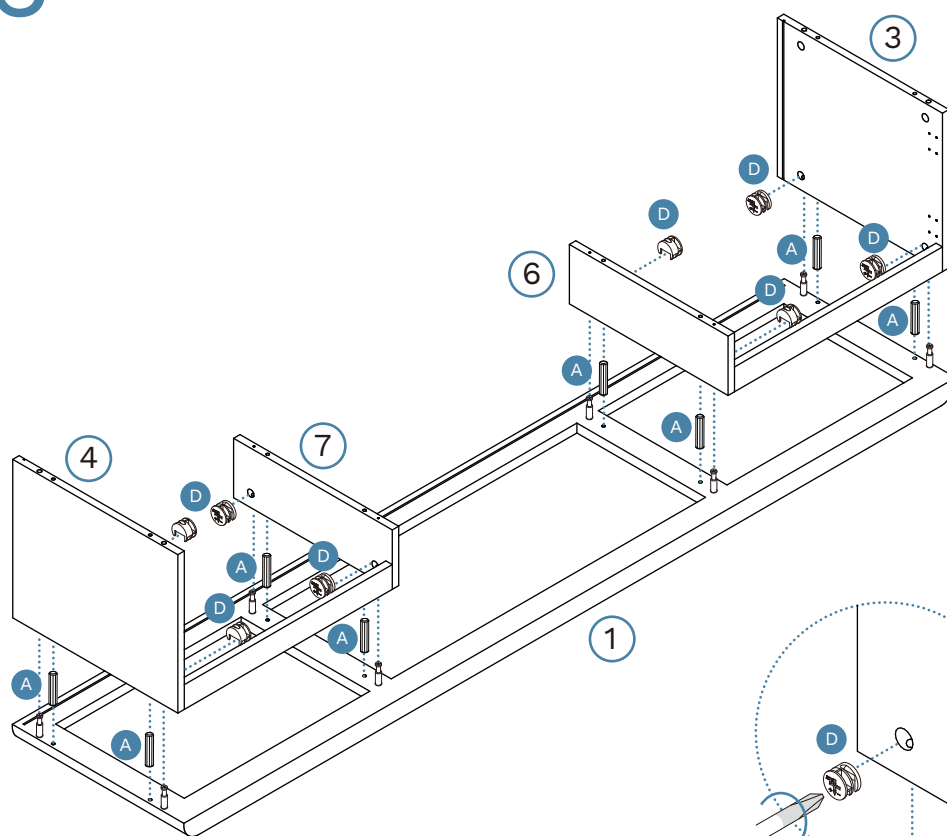 


6



 
Hardware Needed

A		x8
D		x8

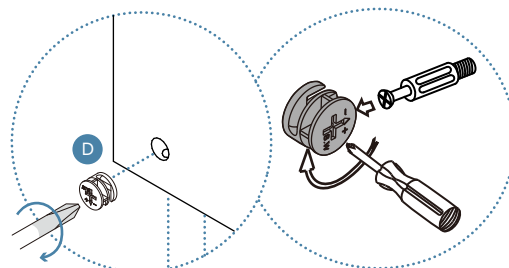



 
Rhodes Entertainment Unit

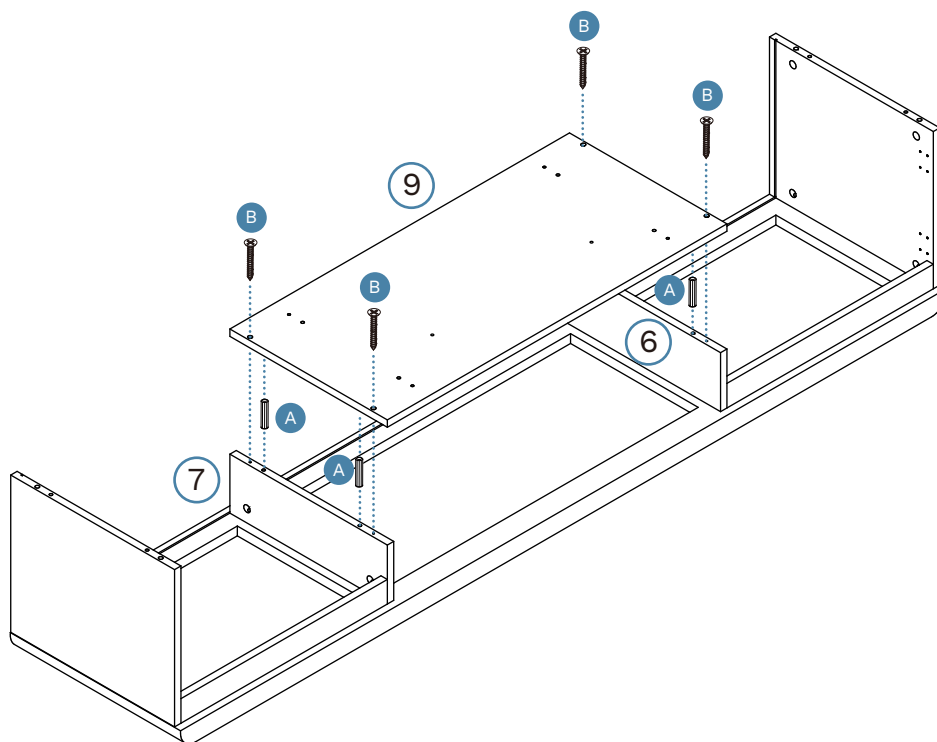7

 


Hardware Needed

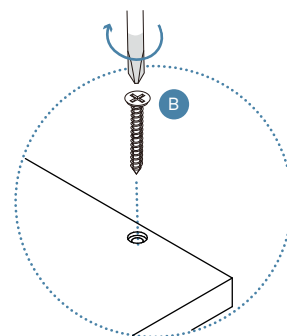

A		x4
B		x4

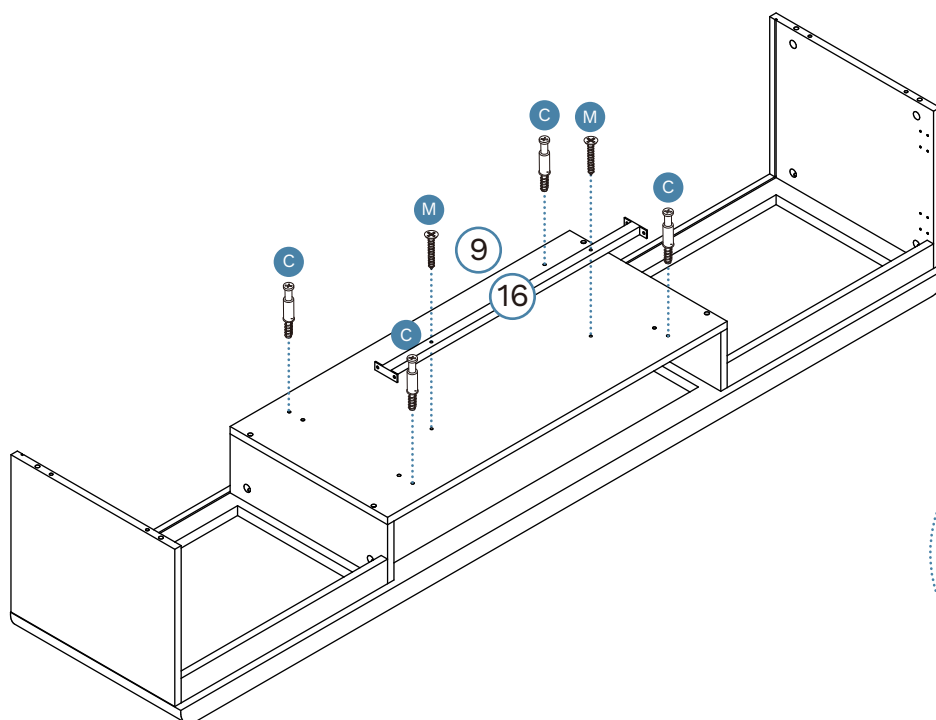 


8



 
Hardware Needed

C		x4
M		x2

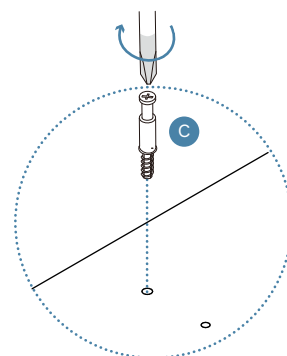



 
Rhodes Entertainment Unit

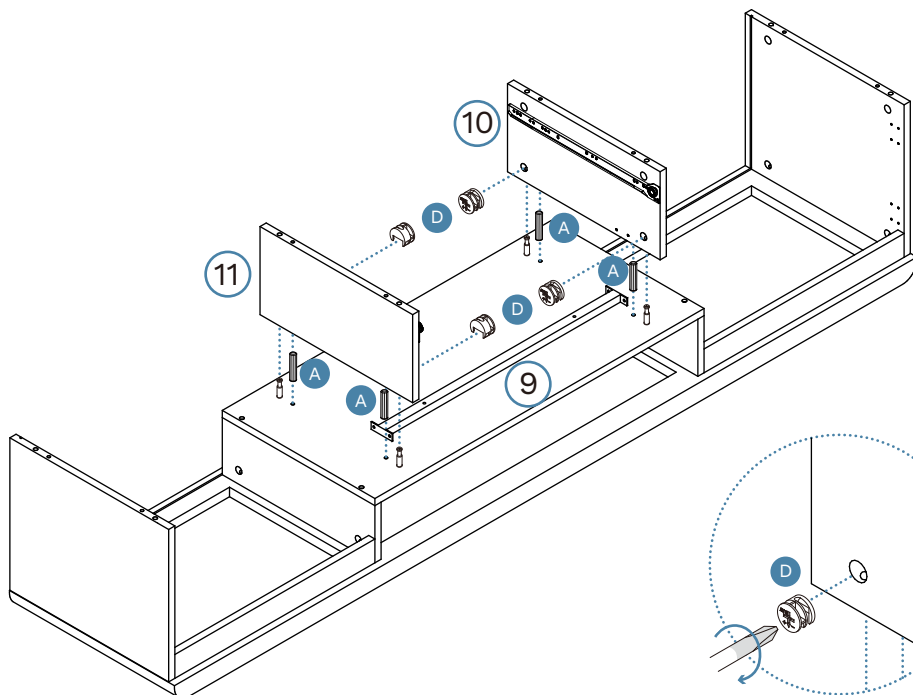9

 


Hardware Needed

A		x4
D		x4

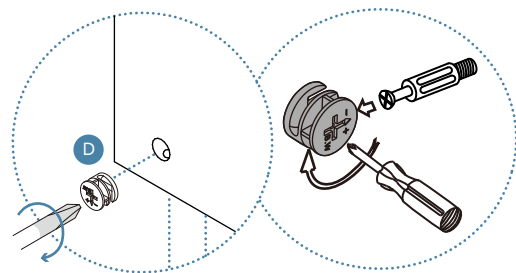 


10

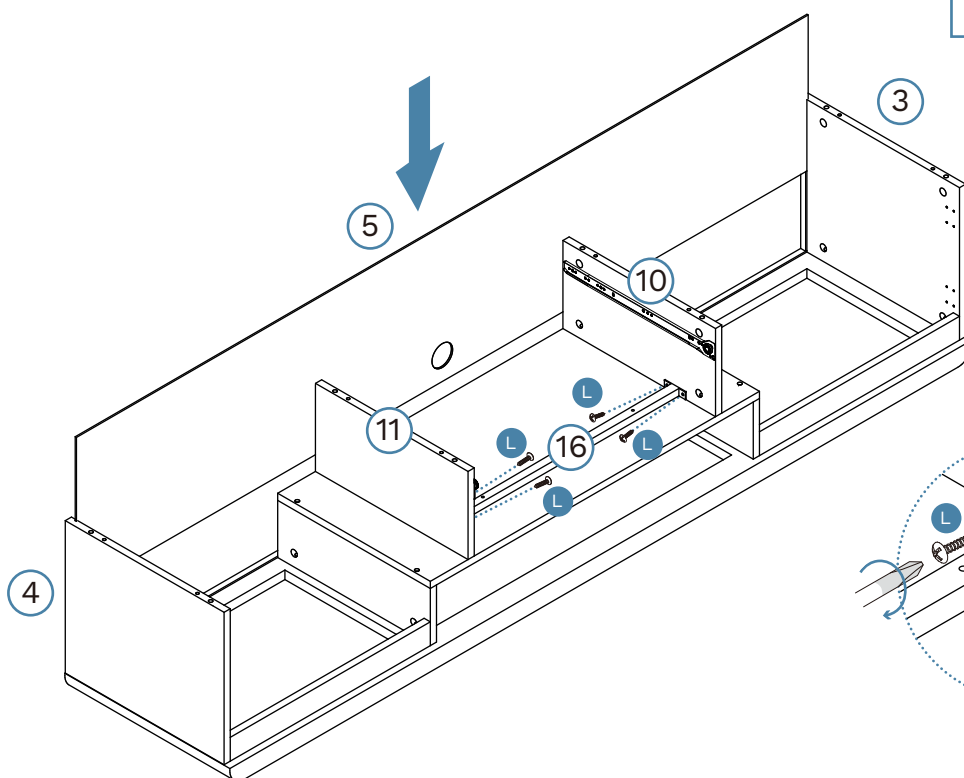

 
Hardware Needed

L		x4
---	---	----

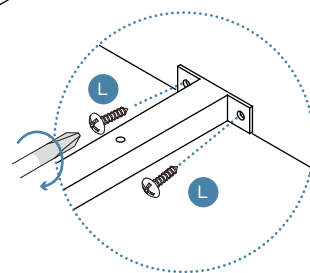


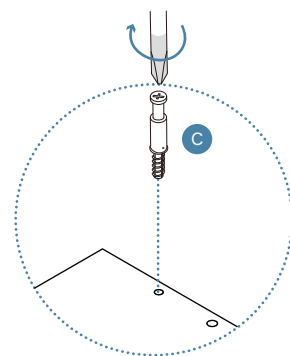 
Rhodes Entertainment Unit

11

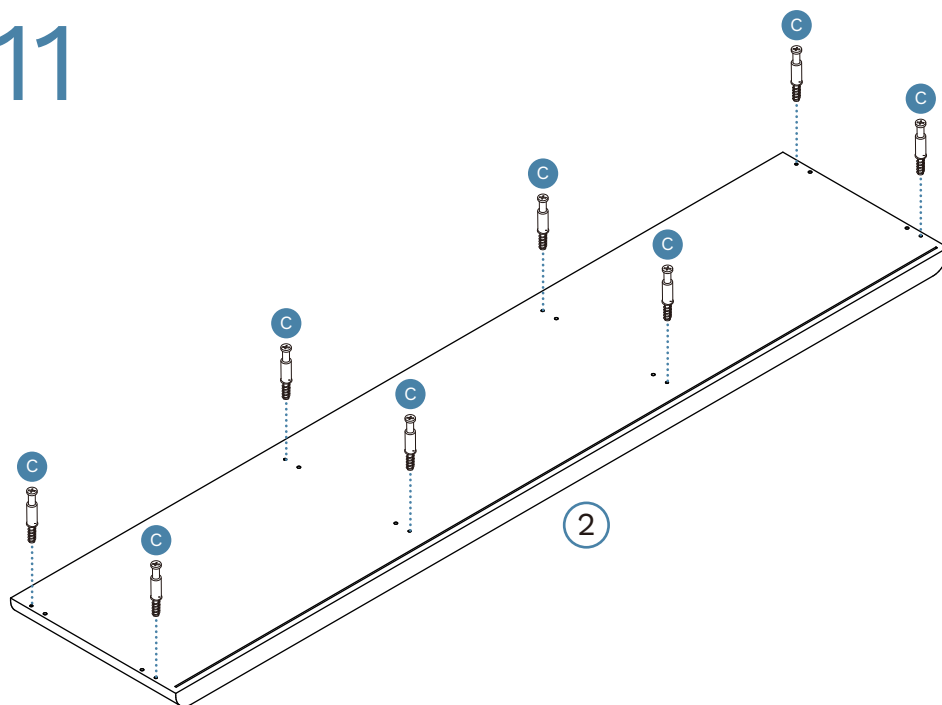 


Hardware Needed



C		x8
---	---	----

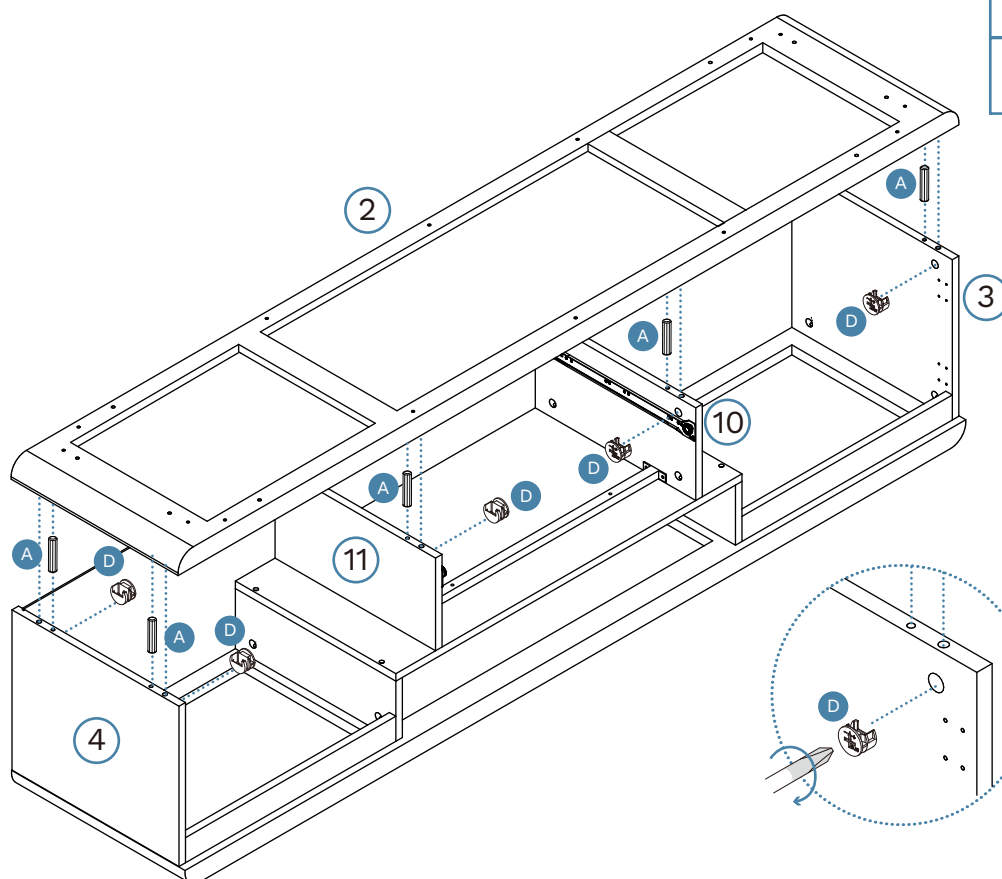 


12



 
Hardware Needed

A		x8
D		x8

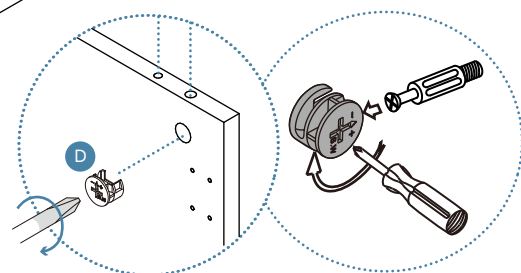



 
Rhodes Entertainment Unit

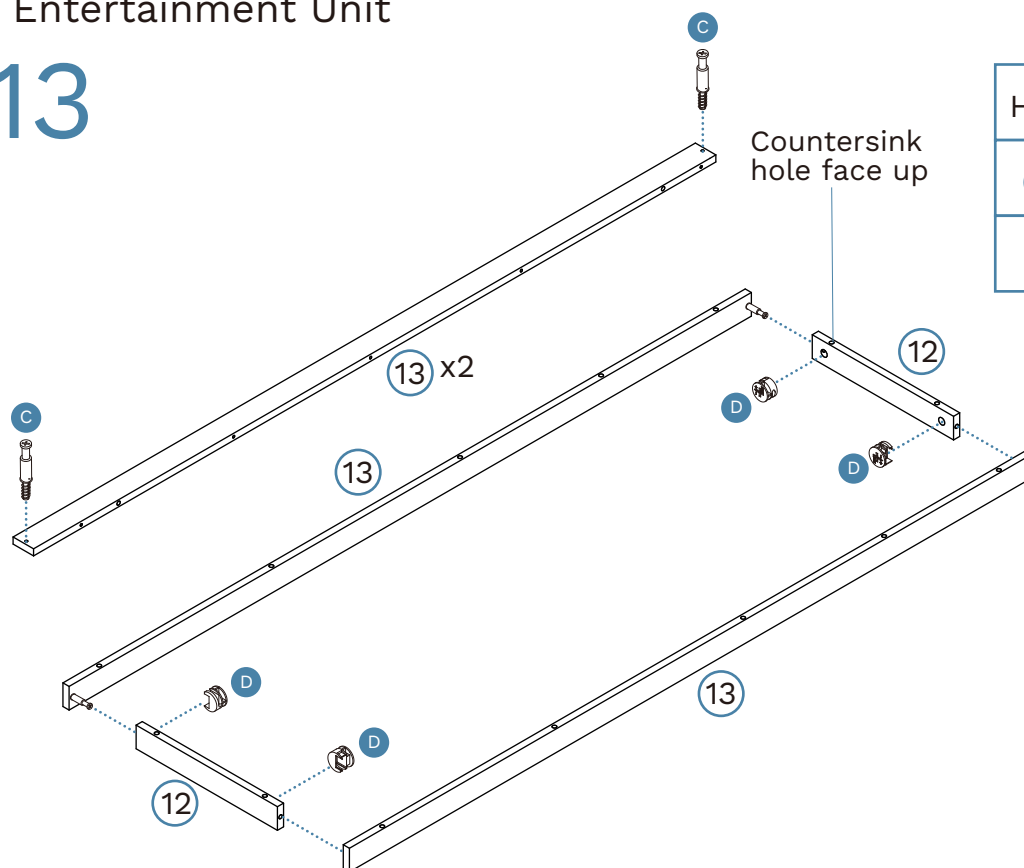13

 


Hardware Needed

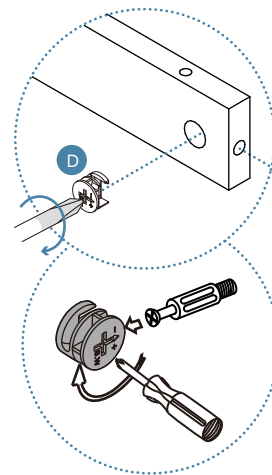

C		x4
D		x4

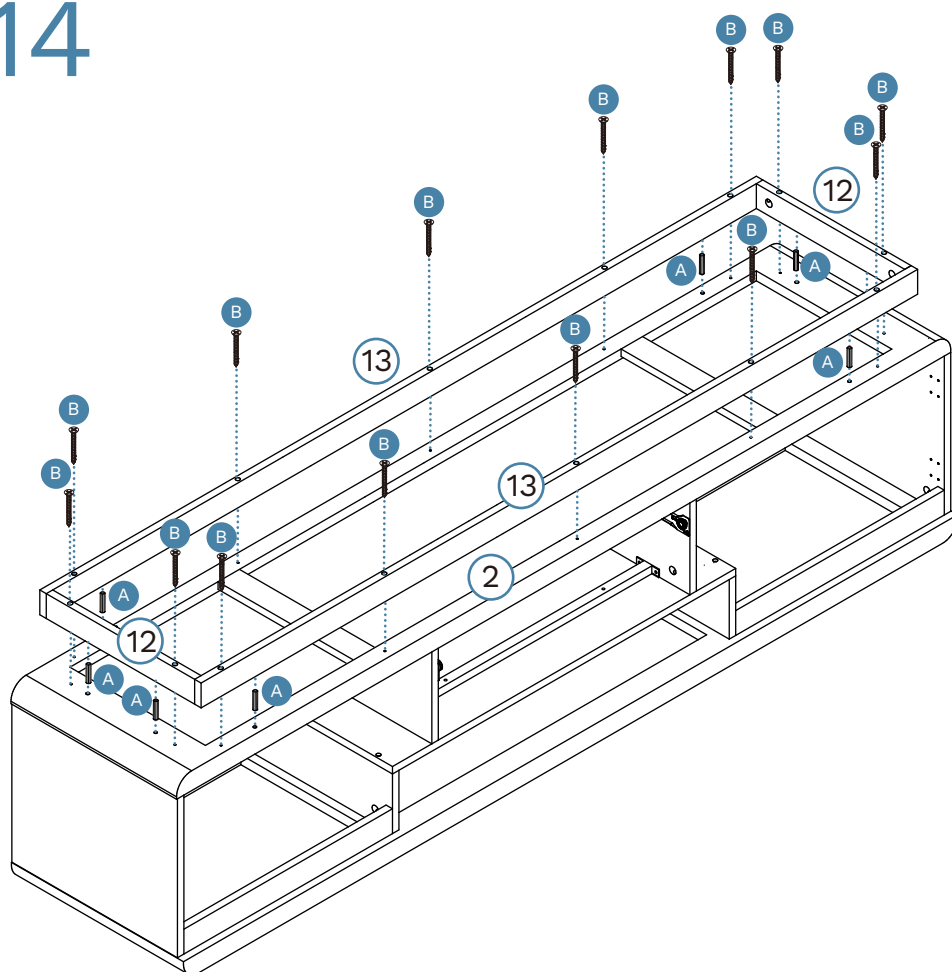 


14



 
Hardware Needed

A		x8
B		x14

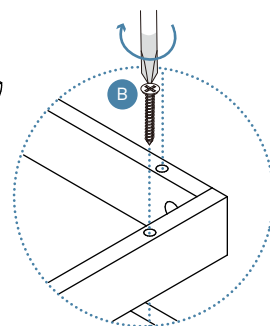

 
Rhodes Entertainment Unit

15

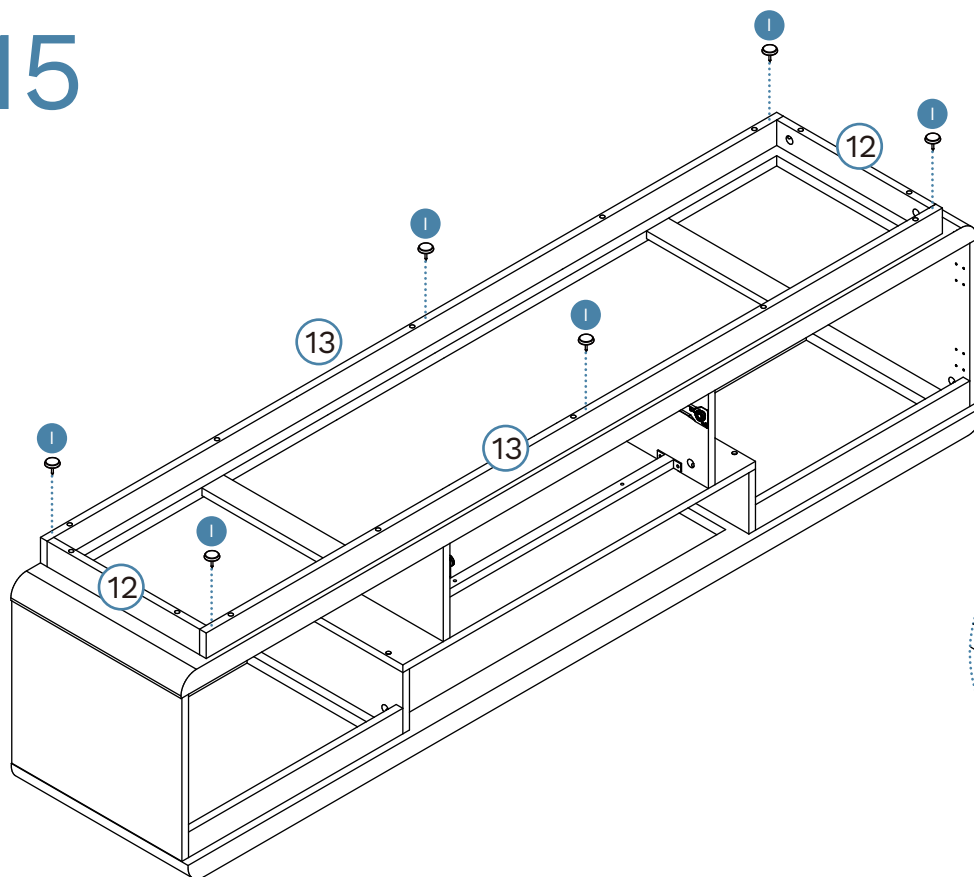

 
Hardware Needed

I		x6
---	---	----

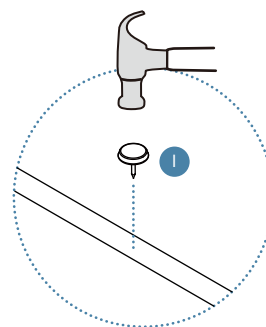



 
TURN OVER

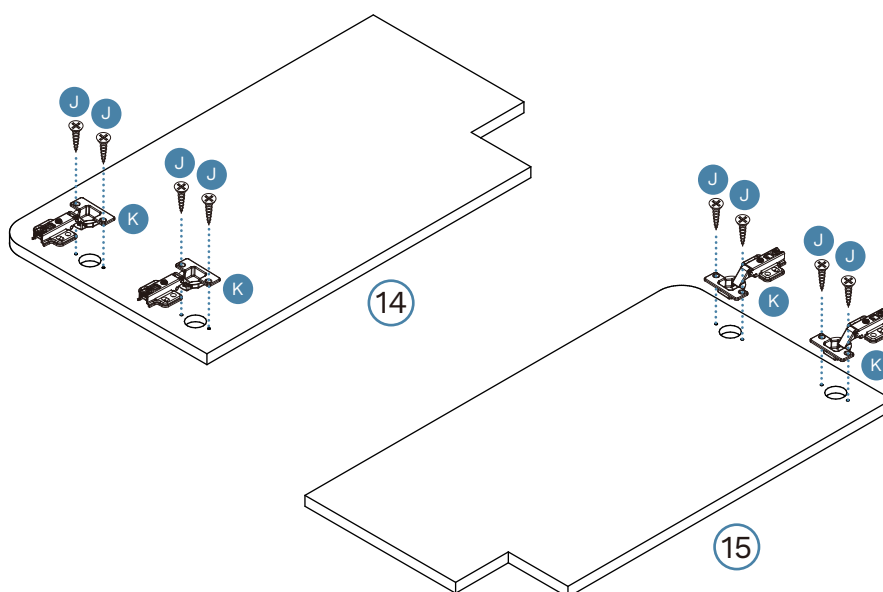16



Hardware Needed

K		x4
J		x8

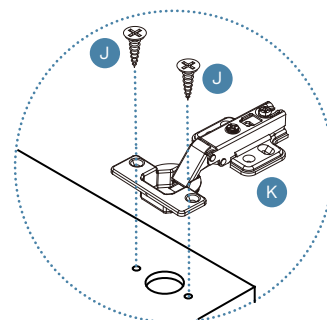

Rhodes

Entertainment Unit

17

 
NOTE: If the doors are uneven or there is a gap in the middle, loosen or tighten the screw on the door hinge until they are sitting flush.

Hardware Needed

J



x16

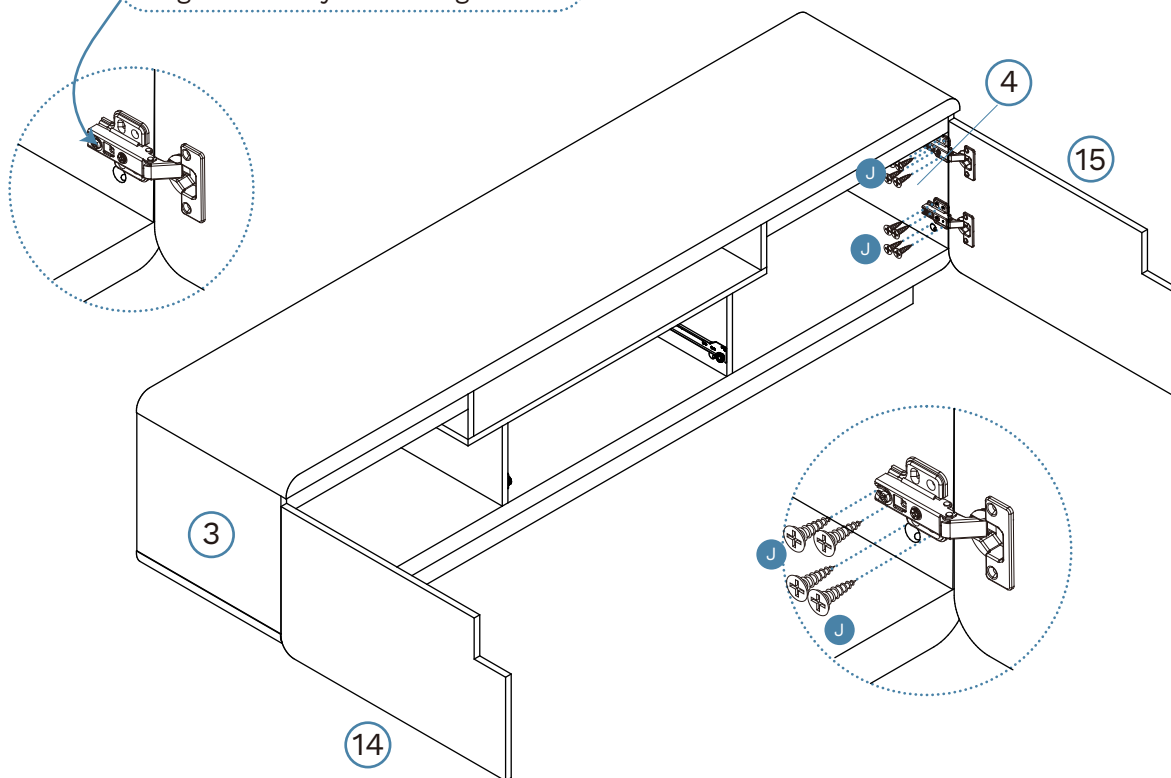

 
18

Hardware Needed

C

 


x5

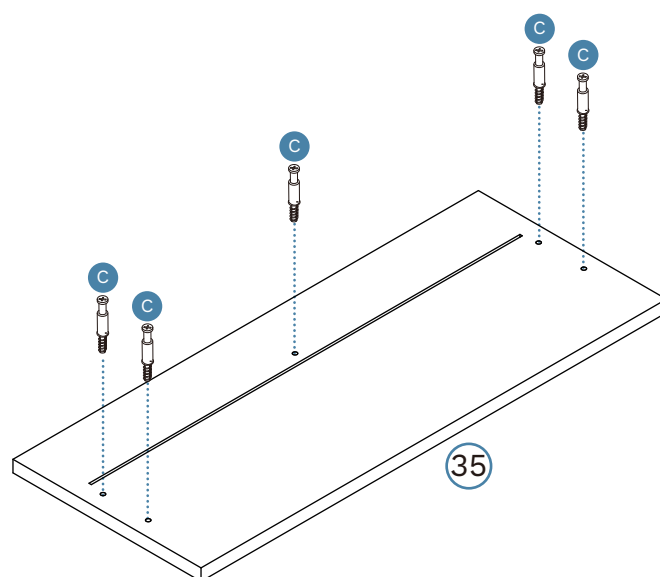

Rhodes Entertainment Unit

19

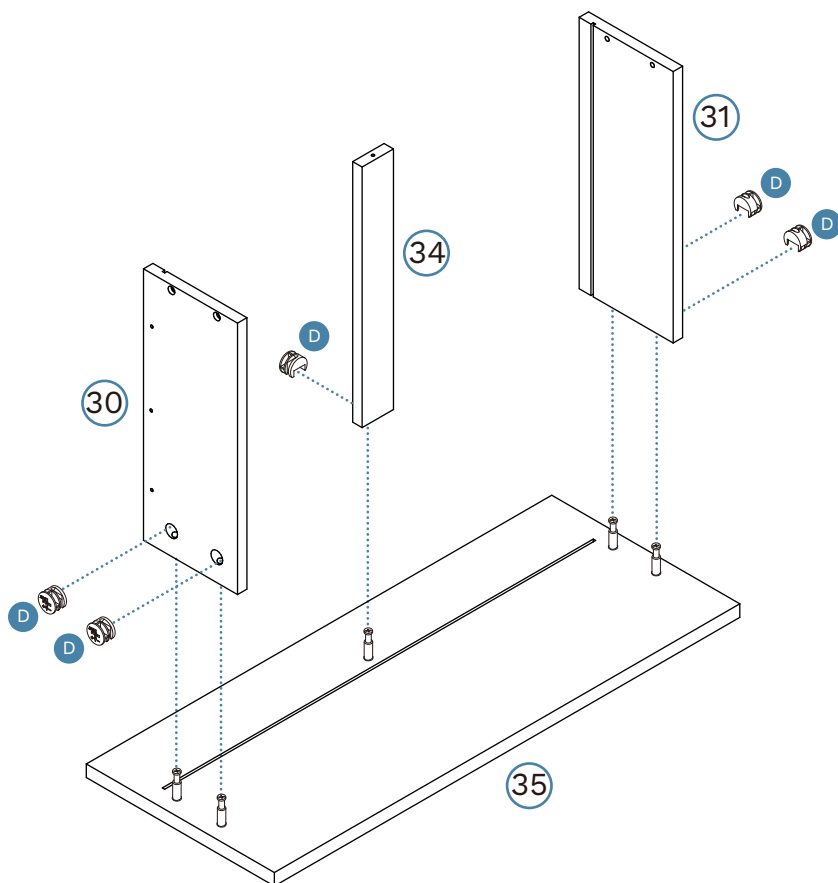

 
Hardware Needed

D



 
x5

20

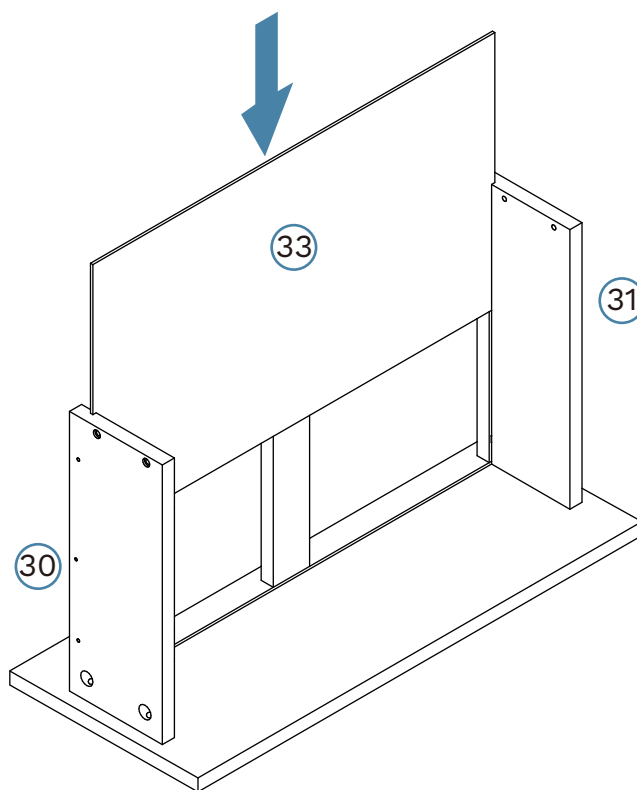

Rhodes Entertainment Unit

 
21

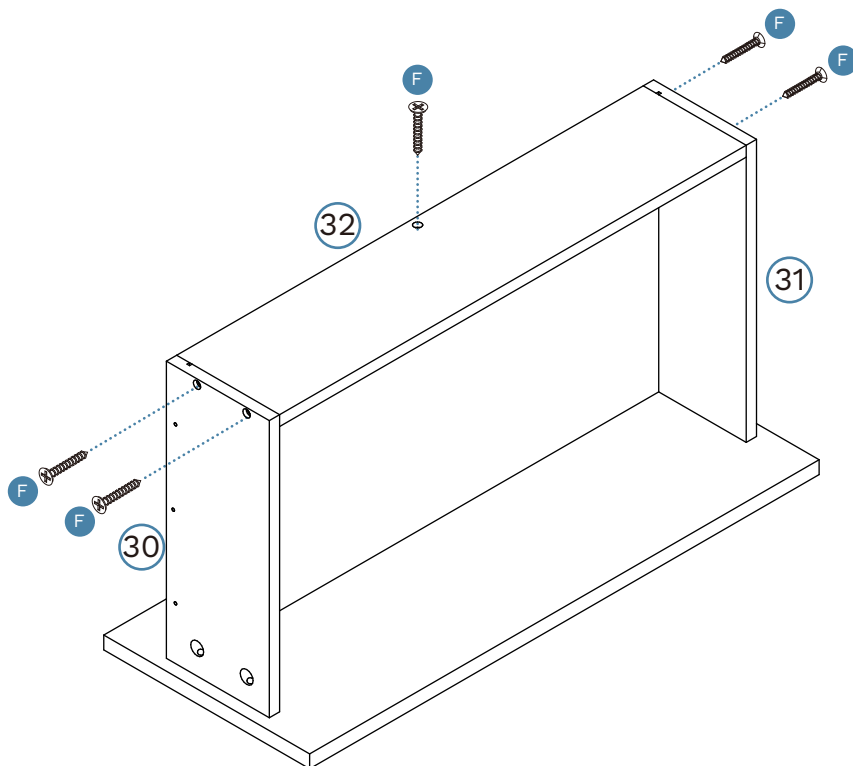




Hardware Needed

 
F		x5
---	---	----

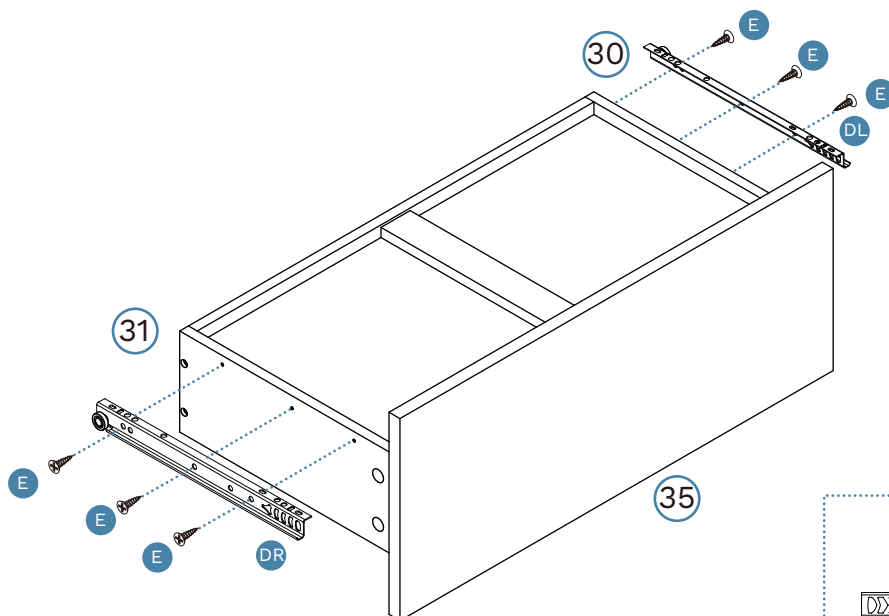22



 
Hardware Needed

E		x6
DL		x1
DR		x1

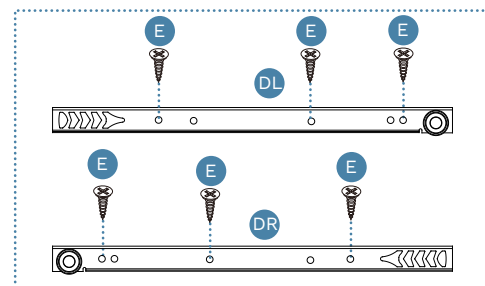

 
Rhodes Entertainment Unit

23

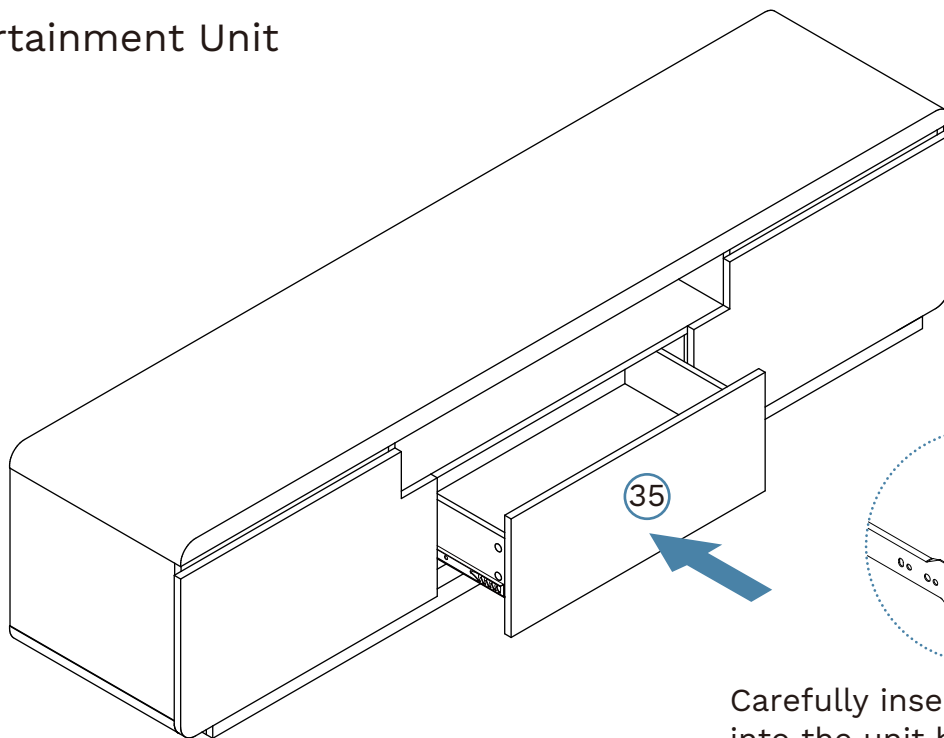



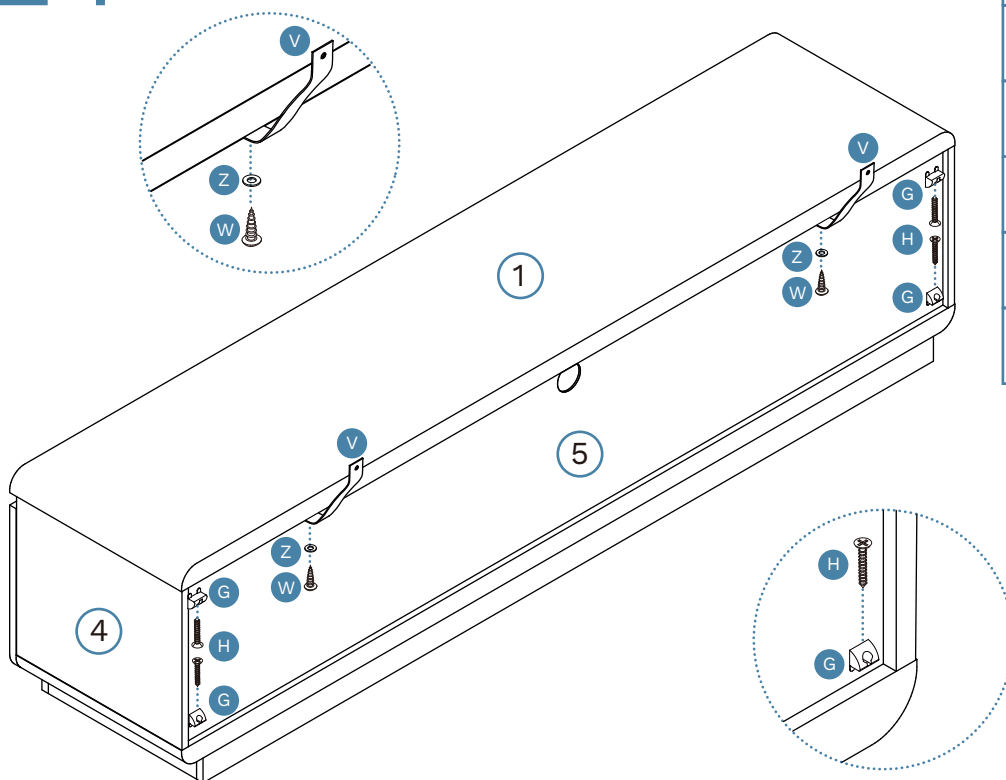


Carefully insert the drawers into the unit by gently guiding the runners into the tracks.

24

 


 


Hardware Needed

 
G		x4
H		x4
V		x2
W		x2
Z		x2

Rhodes Entertainment Unit

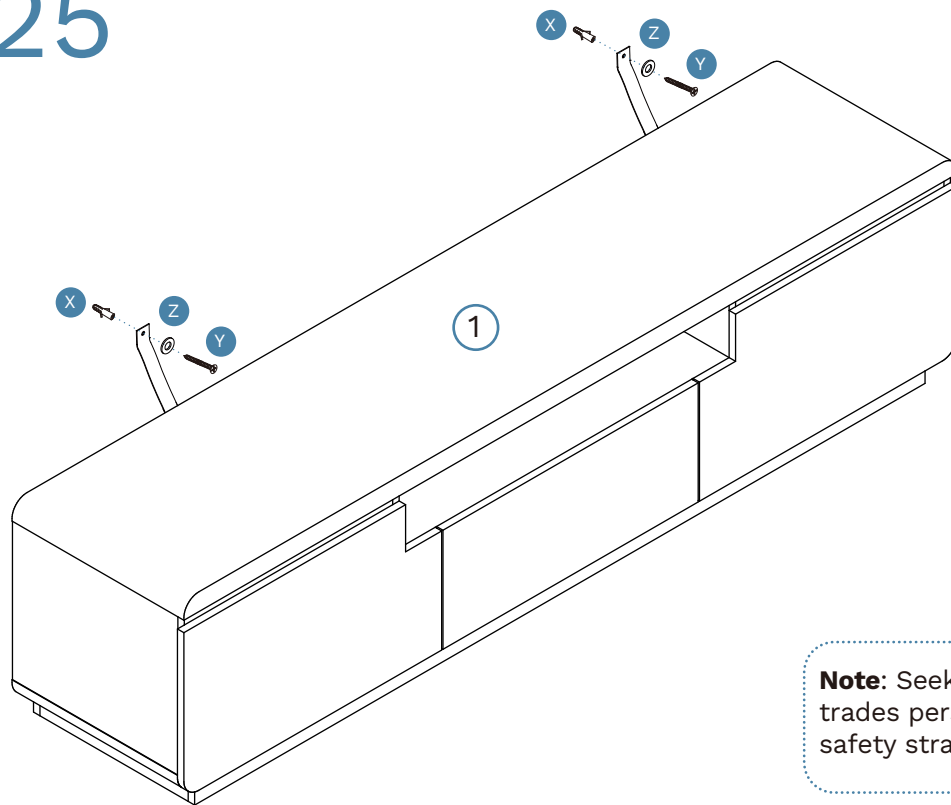25

 


Hardware Needed		
X		x2
Y		x2
Z		x2

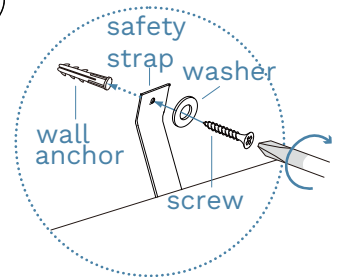

 
 
 
 
 
 
Note: Seek advice from a qualified trades person on how to attach this safety strap to your specific wall.

26

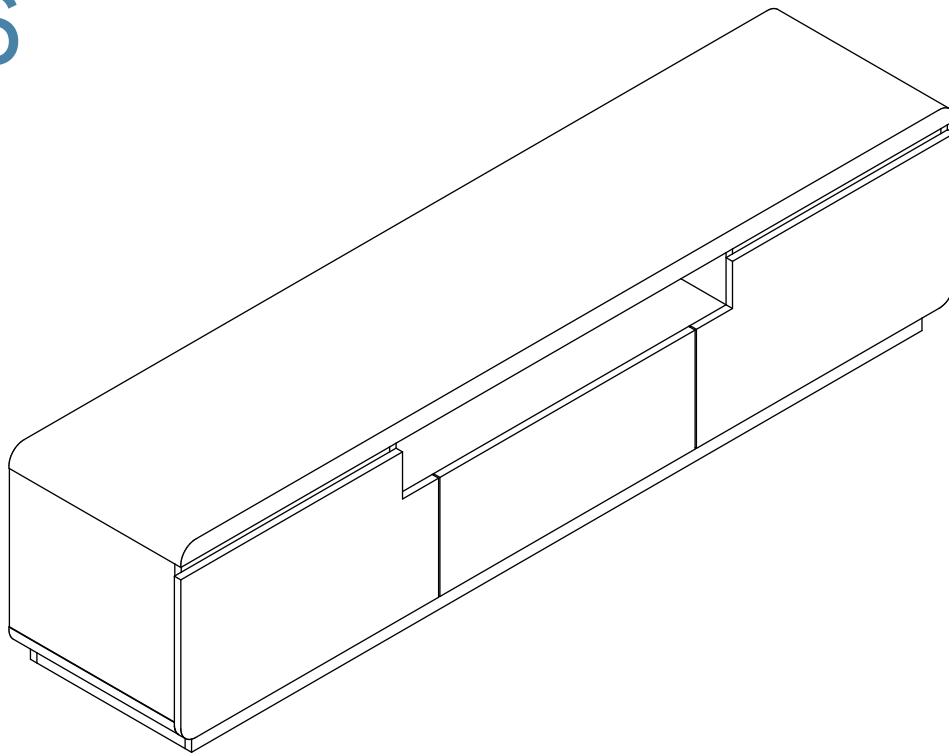

Once assembled lift furniture into place, do not drag. You're done, enjoy!

HOW TO ADJUST THE HINGES TO ALIGN THE DOORS IF NEEDED.

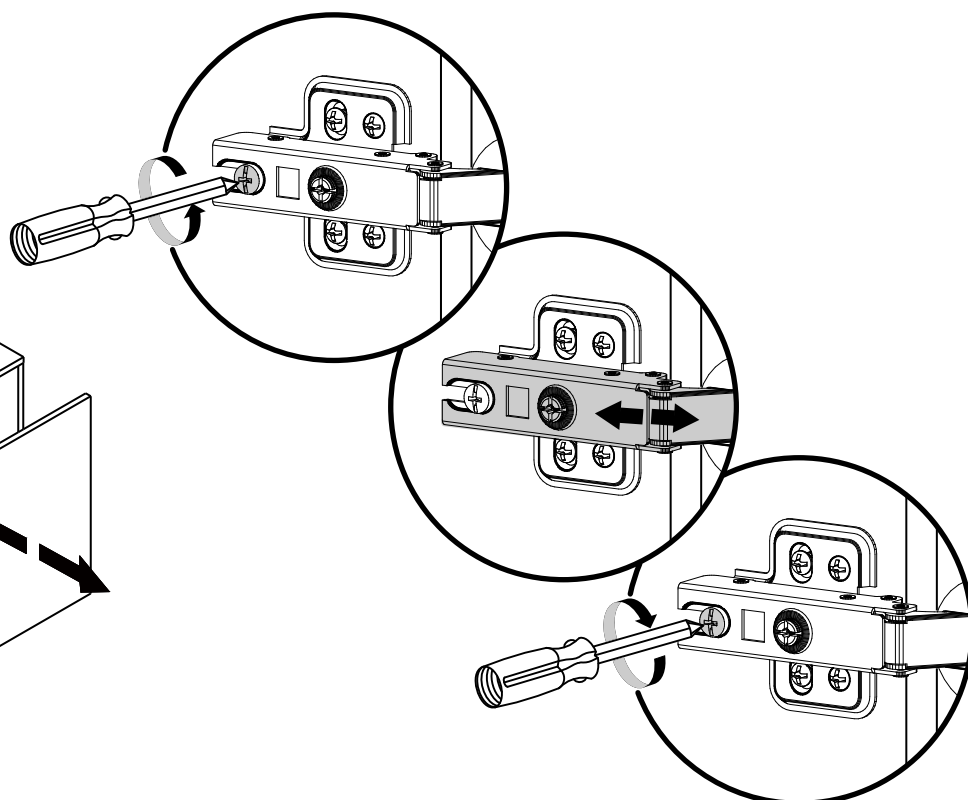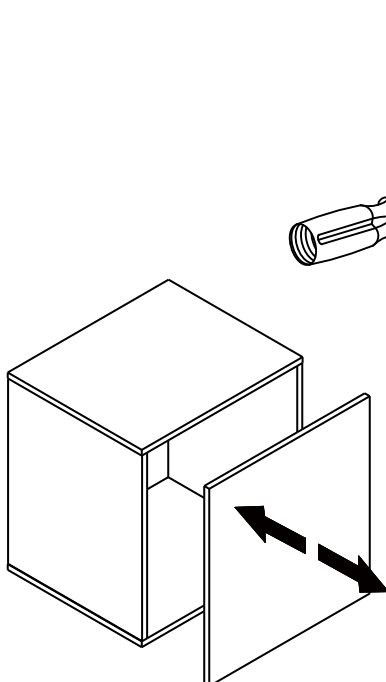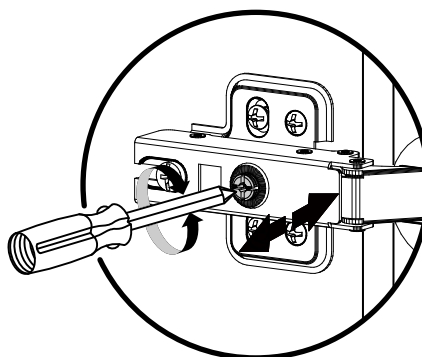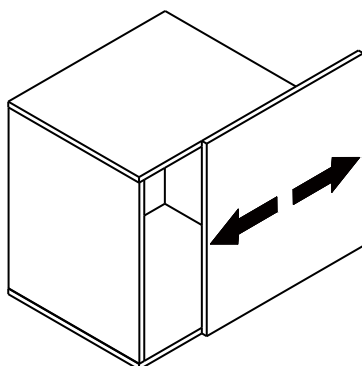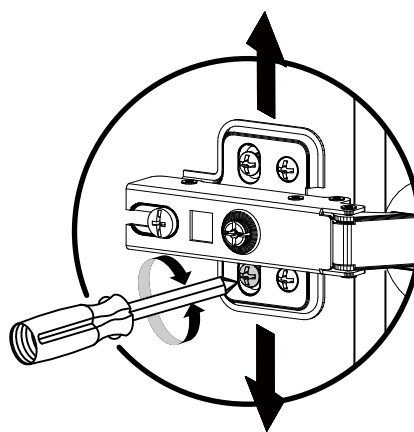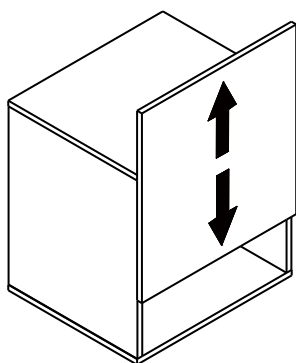



Love it for longer.

Remove all liquid and food spills immediately **ONLY** with a clean, damp, undyed white cloth.
Do **NOT** use abrasives or common household detergents.



Caring for our world.

In the interest of our environment, please dispose of all packaging thoughtfully.



Good news, you're all done!

Love it and share it on Instagram by tagging

 [@mockaaustralia](#) | [@mockanz](#)