
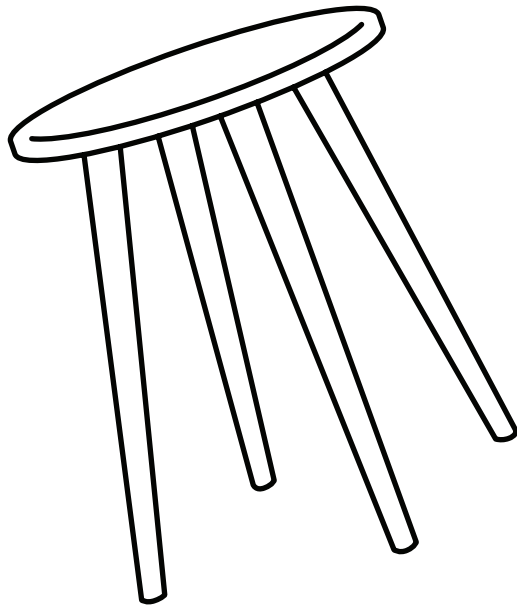


Hello,  
I've arrived!

Now that I'm here you are only one  
flat-pack away from transforming  
your home.

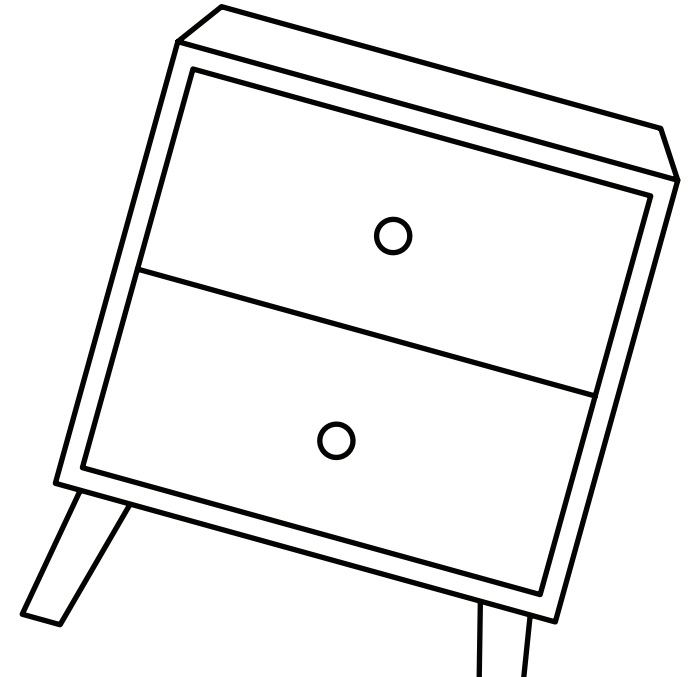

**Mocka.**

# Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to safety testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create beautifully functional spaces to feel comfortably you.

Here are a few assembly tips before you get started:



## Make Time

The first step to all seamless assembly is taking a moment to carefully read through the instructions—you are already on your way to creating a beautifully functional space!



## Set The Mood

Put on your favourite playlist, order that pizza and pour yourself a drink to get in the mood!



## Tool Check

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



## Room Reveal


You did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging and share a pic of your room reveal - we love seeing how you transform your home! Tag us @mockaaustralia/@mockaanz

Happy flat-packing!


*The Mocka Team*

# Regent Bedhead

Thank you for purchasing Regent Bedhead - Double, Queen & King. Please follow the manufacturer's assembly instructions in detail.

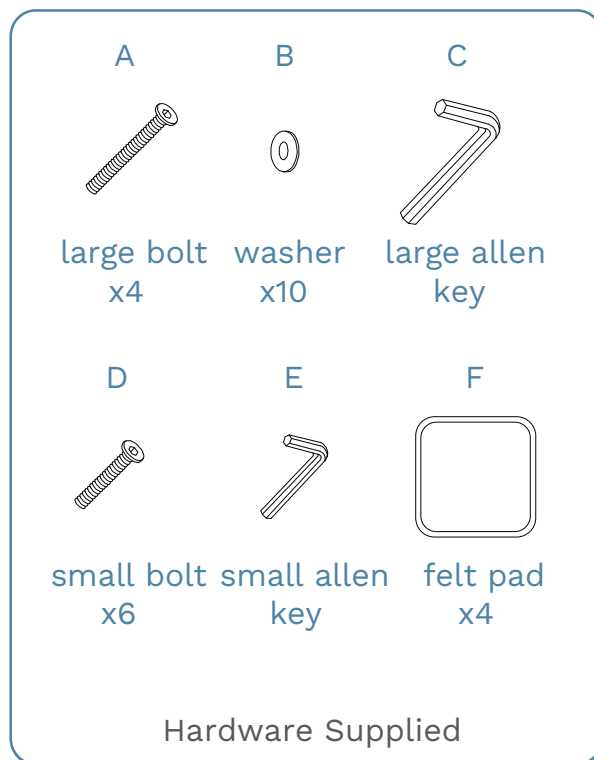
**ATTENTION:**

DO NOT TIGHTEN THE SCREWS FULLY DURING ASSEMBLY. FULLY TIGHTEN SCREWS AFTER THE FINAL ASSEMBLY STEP.

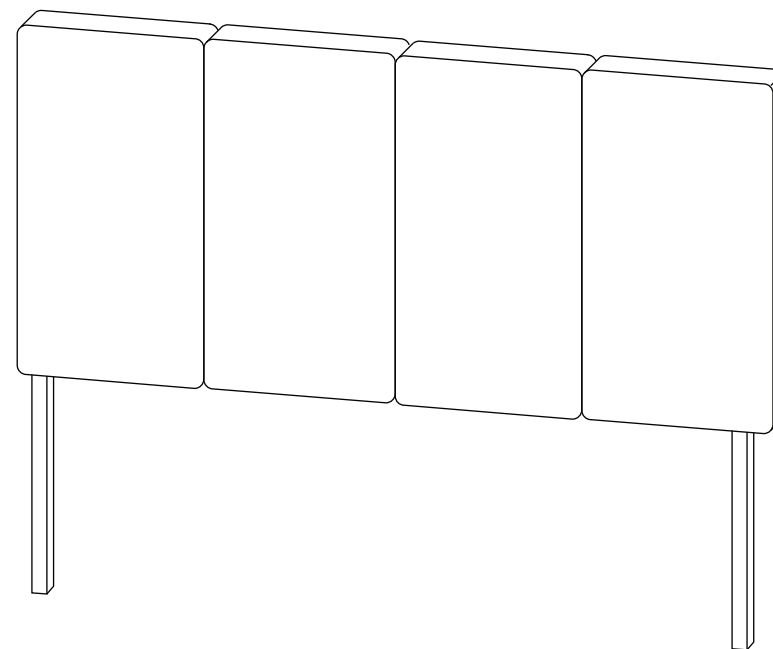


# Regent Bedhead

## 1

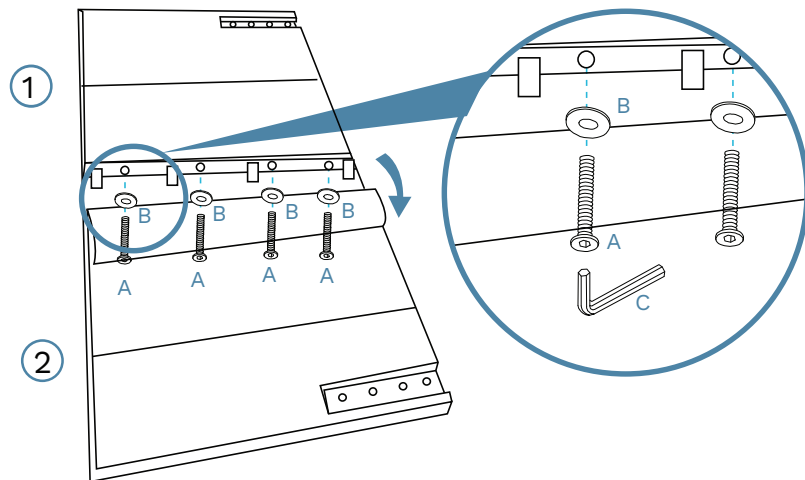

Lift back the velcro flap on the back of the headboard. Attach panel [1] and panel [2] together and secure with 4 x washers (B) and 4 x bolts (A). Tighten with an Allen Key (C). Secure the flap back onto the headboard by pressing down on the velcro.

## 2

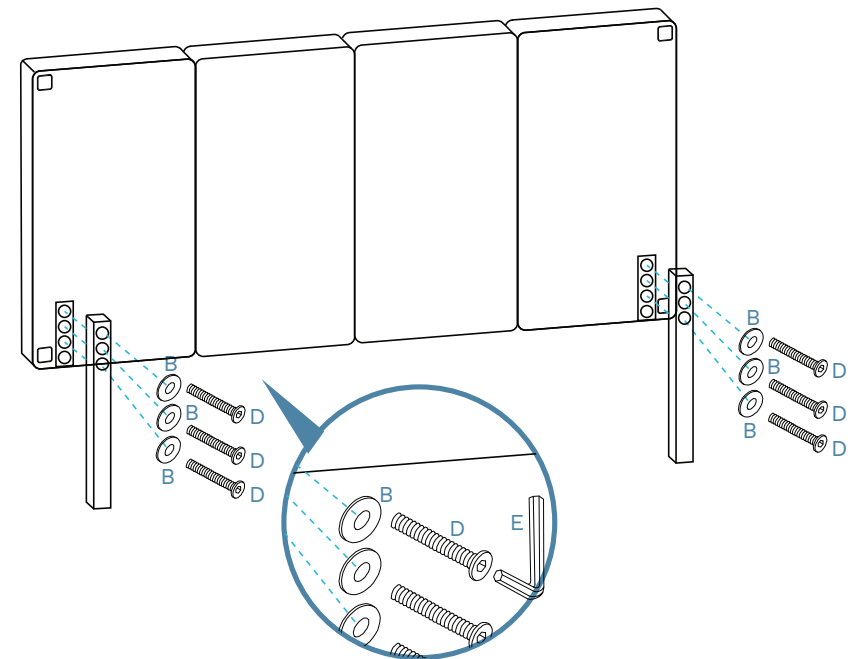

Attach 2 x legs to the back of the bedhead, at your preferred height, and secure with 6 x washers (B) and 6 x bolts (D). Tighten with an Allen Key (E). Attach the 4x felt pads (F) to the back corners of the bedhead to prevent marking walls. Once assembled lift into place, do not drag. You're done, enjoy!