
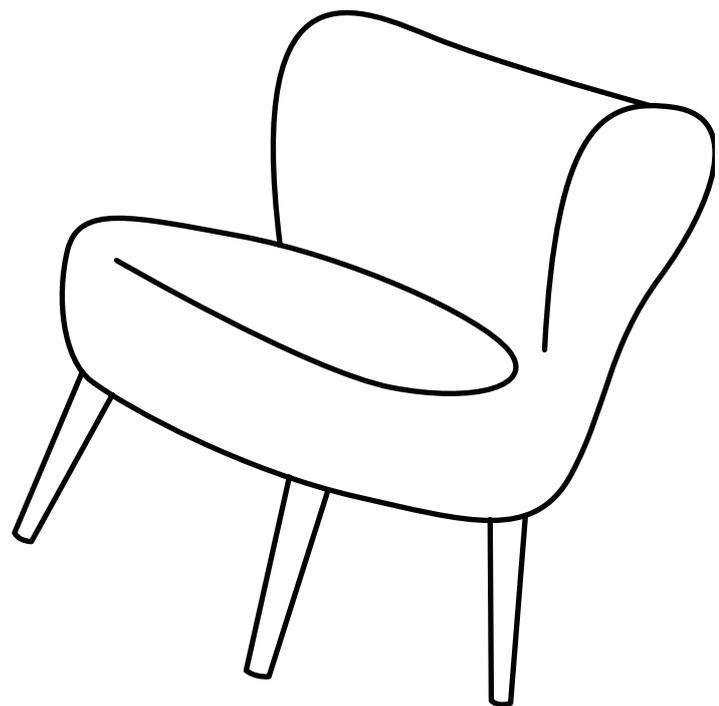


Hello, I've arrived!

Now that I'm here you are only one flat-pack away from transforming your home.

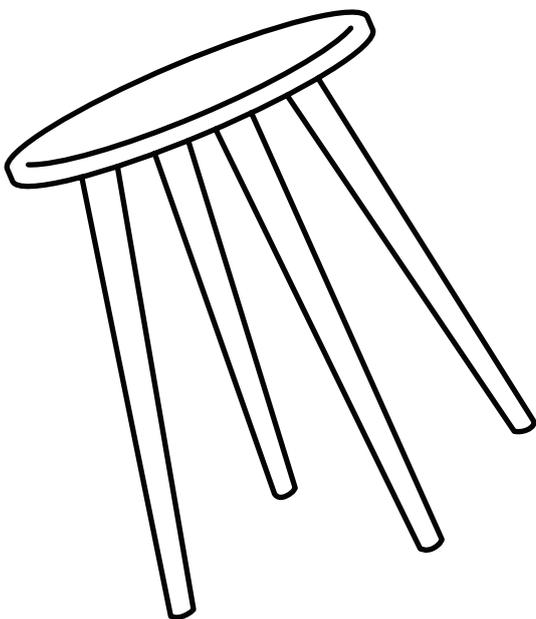

Mocka.

Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to safety testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create beautifully functional spaces to feel comfortably you.

Here are a few assembly tips before you get started:



Make Time

The first step to all seamless assembly is taking a moment to carefully read through the instructions—you are already on your way to creating a beautifully functional space!



Set The Mood

Put on your favourite playlist, order that pizza and pour yourself a drink to get in the mood!



Tool Check

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



Room Reveal

You did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging and share a pic of your room reveal—we love seeing how you transform your home! **Tag us @mockaaustralia/@mockaanz**


Happy flat-packing!

The Mokka Team

Sonata Cot

Toddler Bed Conversion

Thank you for your purchase. Please follow the instructions for correct assembly. While we took great effort to ensure these assembly instructions were correct at the time of printing, sometimes updates are required post production. For the most up to date versions please refer to the product page on our website. mocka.com.au/mocka.co.nz

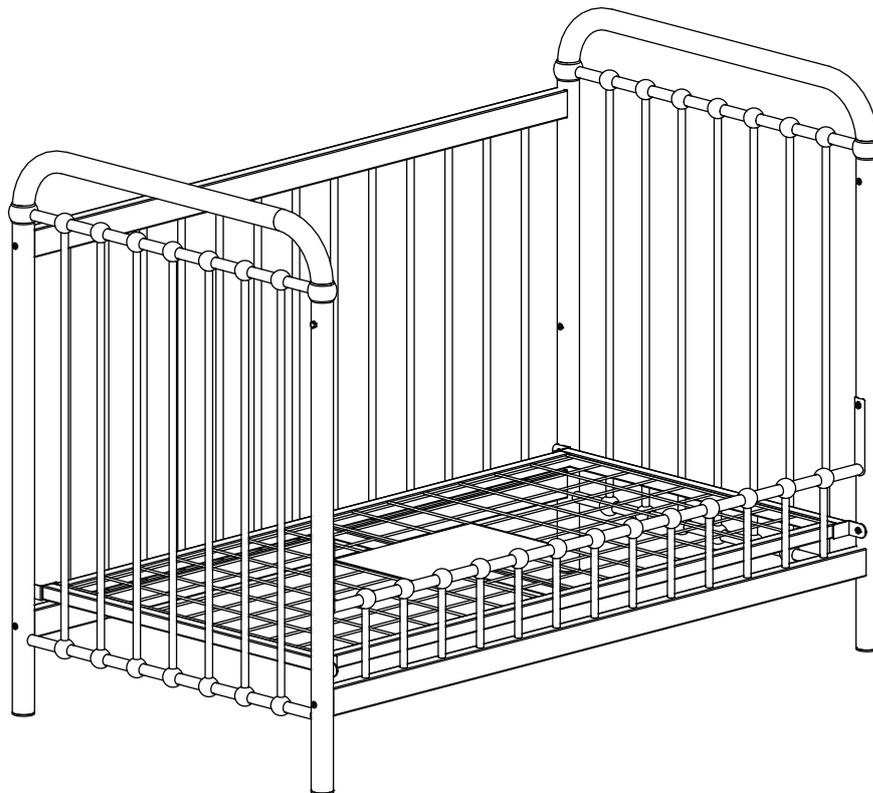


(COT NOT INCLUDED)

Sonata Cot

Toddler Bed Conversion


Panel Layout

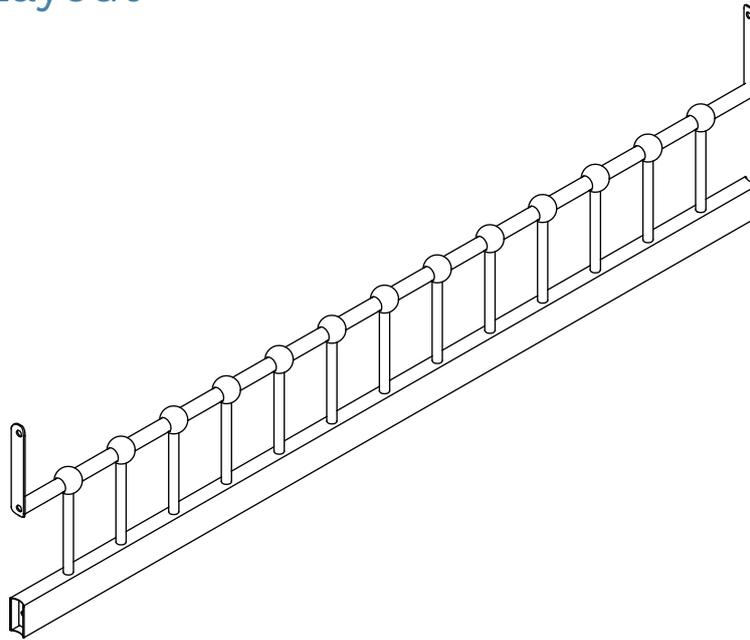

Partlist

Conversion	x1
------------	----


Hardware list

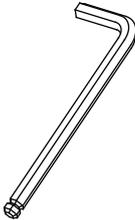A	B	C	D
			
40mm bolt x2	nut x2	allen key x1	spanner x1
HARDWARE SUPPLIED			

Sonata Cot


Toddler Bed Conversion

1

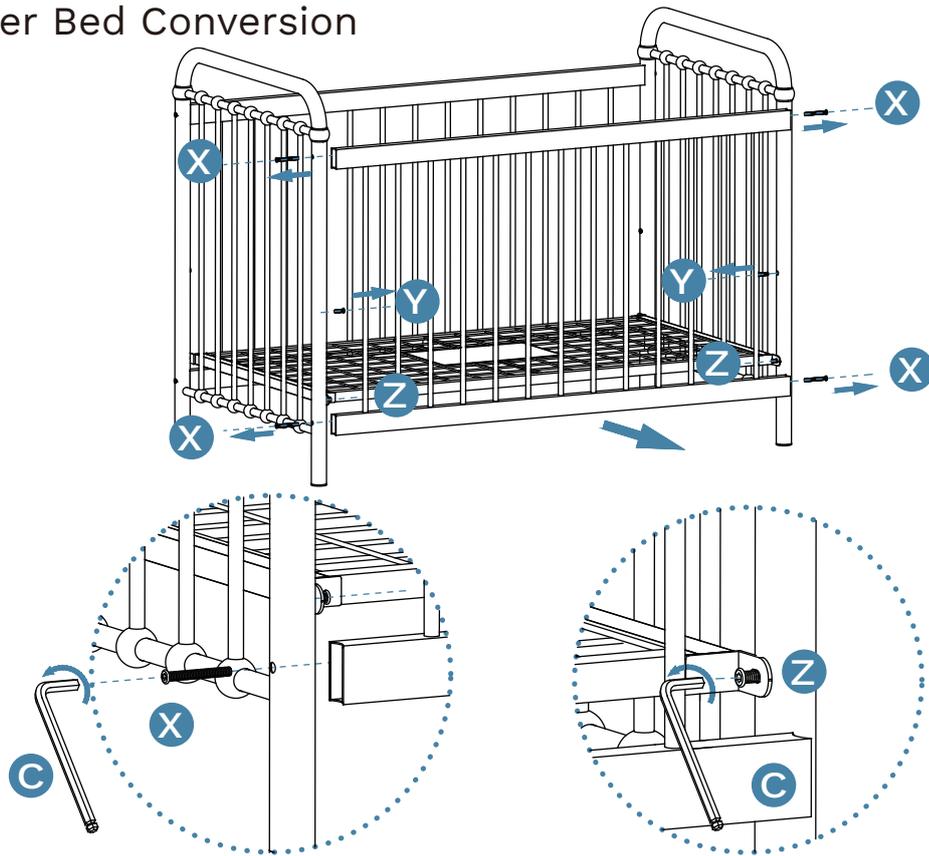

Remove the (X,Y) screws already installed in the cot with Allen Key (C). Loosen the screw (Z), don't all shake out. Please hold onto the (X) and (Y) screws as you will need these to install the conversion.

2

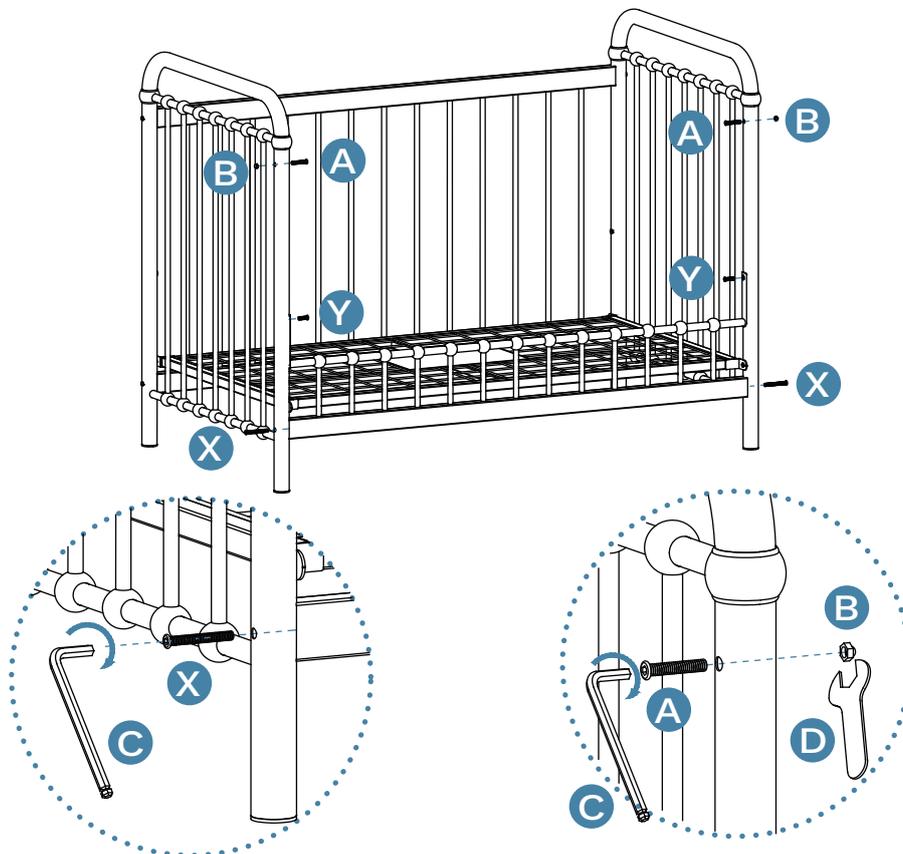

Hardware Needed		
A		x2
B		x2

Attach the conversion to the cot and insert 2x (A) Bolts and 2x (B) nuts with allen key (C) and spanner (D), as shown. Insert the (X) and (Y) screws that were taken out of your cot. Tighten all screws. You're done, enjoy!