


KARIZMA


PREPARATIONS:


Before assembling the luminaire, carefully read these instructions to make sure the luminaire functions correctly and safely • The mains isolator on the consumer unit/fuse board must be in "OFF" position before commencing any electrical work • The luminaires should be mounted on a flat, smooth surface • With all painted/plated products some shade and finishing variation may occur, please make sure the luminaires are checked before installation • The luminaire must not be modified. Modifying the luminaire in any way invalidates the guarantee of conformity with standards and directives in force and it could make the actual luminaire hazardous • Before connecting the luminaire, make sure the mains power supply corresponds to the power indicated on the luminaire label • Never cover the luminaire during use. Luminaires classified for indoor use must never be used outdoors even if they are protected from the elements • The manufacturer reserves the right to change the product specification without prior notice.




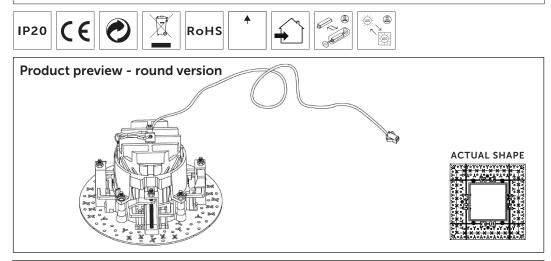


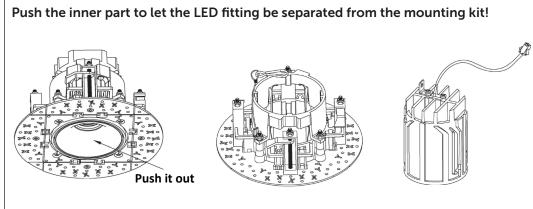





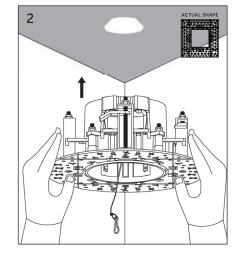


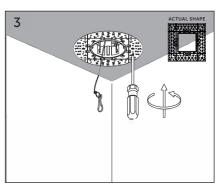


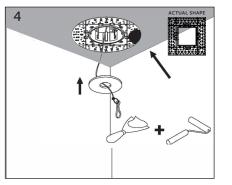

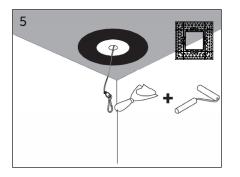

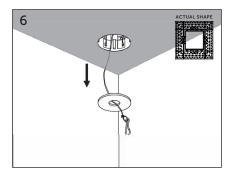

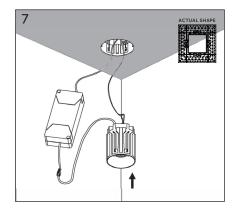

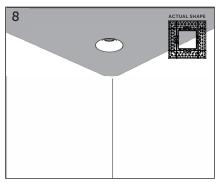



karizmaluce.com


KARIZMA [luce]

MULTIPLE FRAME INSTALLATION


DEA DION S

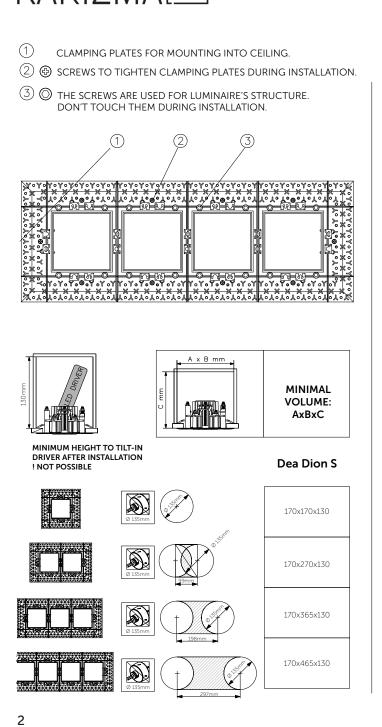

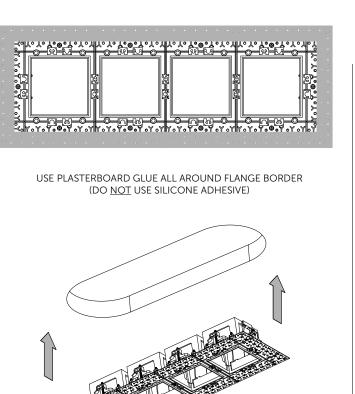

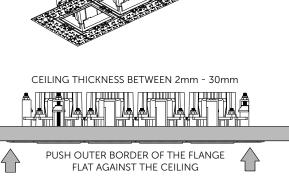









TURN THE SCREW TO MOVE + CLAMP UP/DOWN



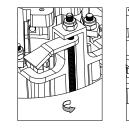

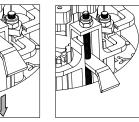


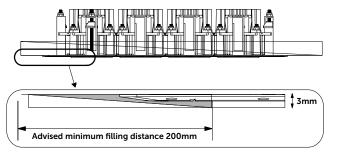

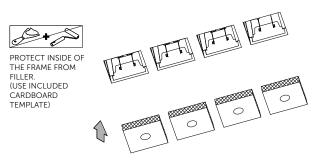


TRIMLESS FRAME | COMBINATIONS

DEA DION S

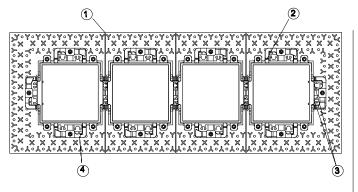

BREAK-OFF LINES FOR COMBINING FRAMES

- (2) CUT MARKS ON REINFORCEMENT ARM FOR COMBINING FRAMES
- 3 SNAP FEATURES FOR COMBINING FRAMES
- (4) REINFORCEMENT ARM

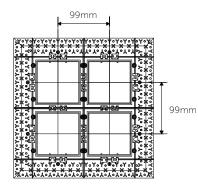



CENTER DISTANCE BETWEEN COMBINED FRAMES ALWAYS 99mm

STEP 1: COMPOSE YOUR INDIVIDUAL DESIGN




STEP 2. PRESENT YOUR COMPOSED COMBINATION TO SEE WHICH BREAK-OFF LINES ARE APPLICABLE.







STEP 3. USE SIDE CUTTER TO CUT LOOSE CORRECT REINFORCEMENT ARMS ON THE CUT MARKER

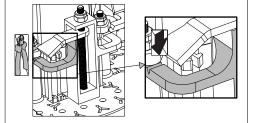

STEP 4. BREAK-OFF THE FLANGES ON THE CORRECT BREAK-OFF LINES

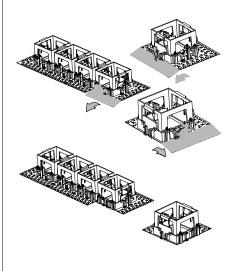

STEP 5. CONNECT THE FRAMES BY PRESSING THE SNAP FEATURES INTO EACH OTHER







The individual frames' front sides should be placed on a very flat work table while connecting them together by pressing.




STEP 6. USE THE CENTER MARKERS TO DEFINE HOLE SAW CENTERS

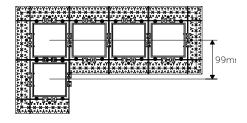

STEP 7. INSTALL THE FRAME BY USING INSTALLATION INSTRUCTION

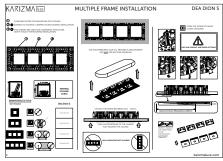


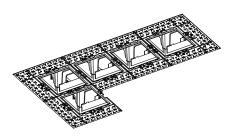





TRIMLESS FRAME | INSTALL MODULES

DEA DION S

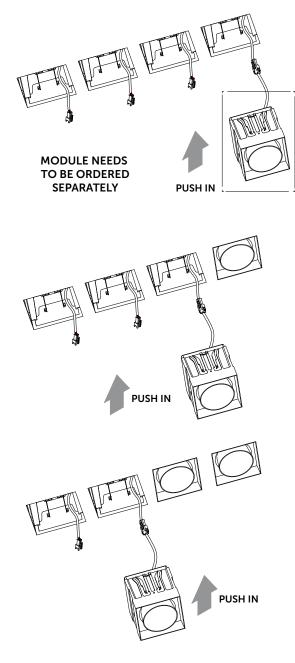

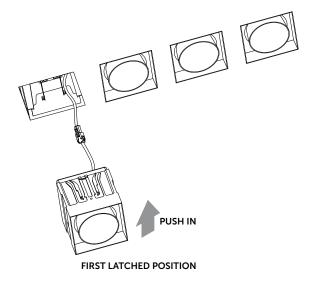


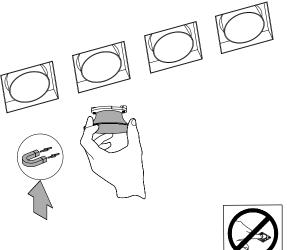






NOTES: A special tool to help you to change the reflectors you want.

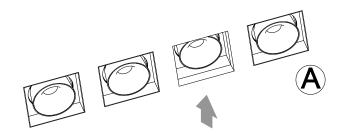

Push module up to let it fall down itself at the preseted position

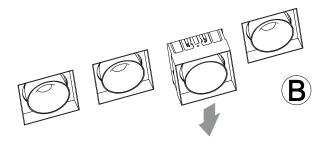

Pull module down out of the mounting kit for relamping or power supply changing