

O93V Expansion Spec Sheet

STOCK NO.	LENGTH	PCS. PER BOX
093V	10'	20

Description: Control joints have met their match! This bead is meticulously crafted of both rigid and flexible PVC to create a deep "V" that flexes to accommodate $\frac{3}{8}$ " in building movement. Tear off strips make finishing easy. Delivers high-performance ratings for smoke and sound.

Advantages: Made from rust proof, dent resistant PVC to reduce jobsite and handling damage. Does not contain cellulose, a potential food source for mold.

Fire Rated Assemblies: For fire rated assemblies, use the Gypsum Association Fire Resistance Design Manual GA-600-2012. For a 1 hour fire wall use SRS1101. For a 2 hour wall use SRS1201. Other applicable assemblies are SRS1401, SRS2101, SRS2201, and SRS5101-SRS5104.

Limitations: Product is designed for interior use.

Applicable Standards: Rigid PVC products made by Trim-Tex meet ASTM specifications D3678, D1784, C1047 and achieve a Class A rating for flame spread and smoke developed when tested under ASTM E84. Flame spread: 15, smoke developed: 40.

Surface Characteristics: Trim-Tex products are made from PVC. PVC does not support combustion and is self-extinguishing when the source of flame or heat is removed.

Installation: Trim-Tex recommends following established acceptable industry standard installation methods. Detailed installation instructions can be found at www.trim-tex.com.

Finishing: Always use a high quality paint.

Accessories: 847 Spray Adhesive and Safety Products distributed by Trim-Tex.

Installation Guide

Before Installation:

Snap chalk lines as a guide. Measure, cut and dry fit the bead.

Step 1:

Coat both the bead and drywall with Trim-Tex 847 Spray Adhesive.

Step 2:

Press the bead in place, applying pressure to the mud legs.

Step 3:

Staple every 6"-8" using $\frac{1}{2}$ " staples.


Step 4:

Finish with drywall compound.


Step 5:

Remove tear-off strips prior to sanding.

Step 1:

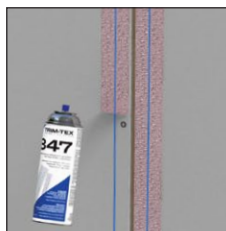


Step 2:

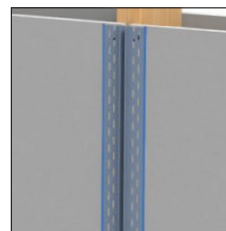


Step 3:



Step 4:

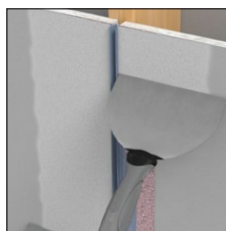

Step 5:

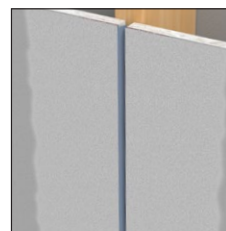

Scan Below for Installation Video

